


FIGURE 1

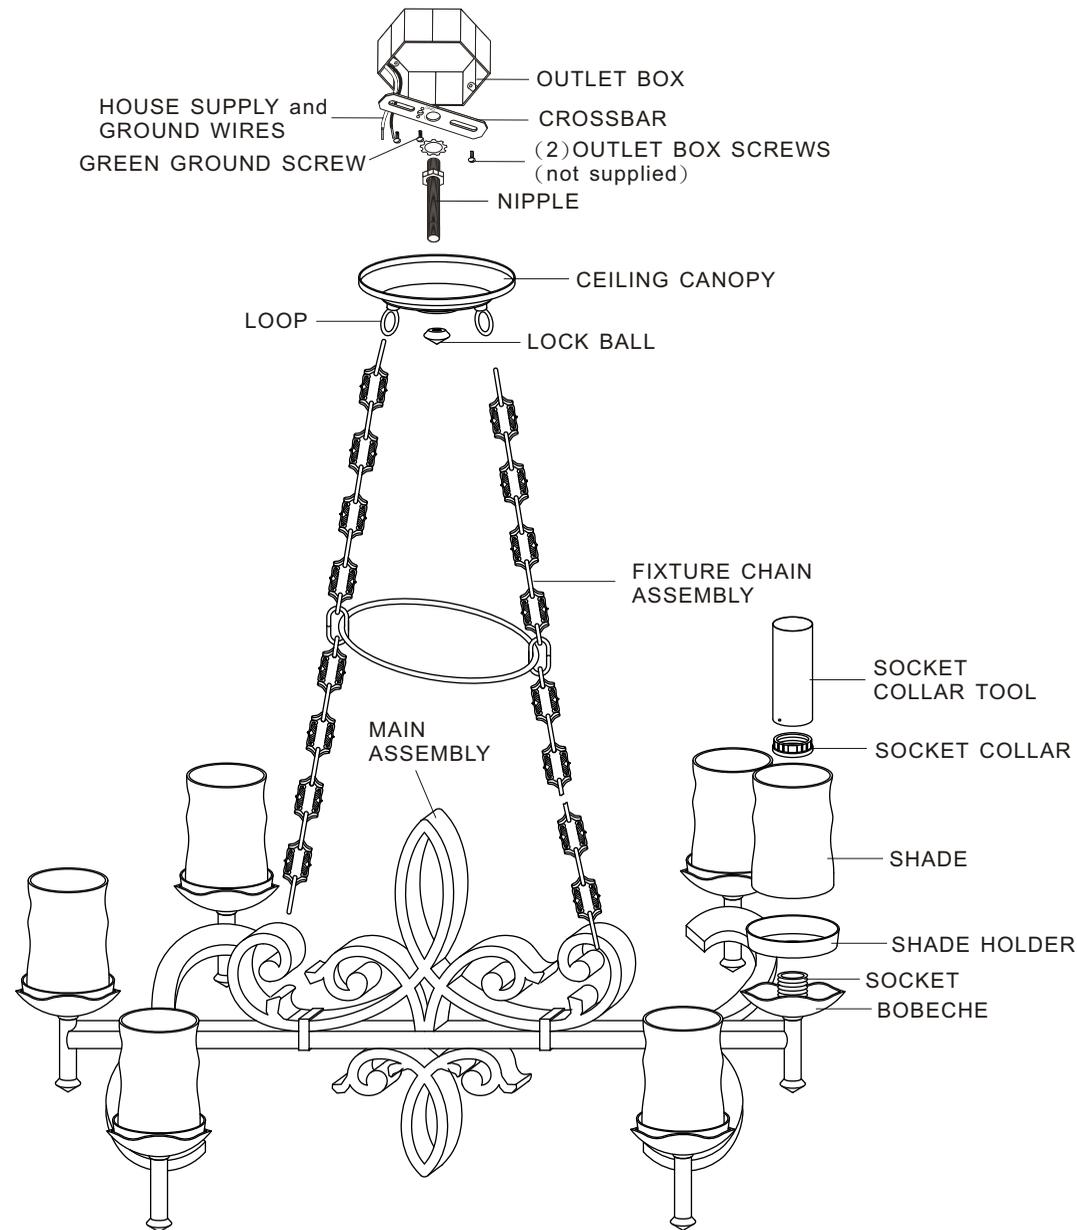

ASSEMBLY/INSTALLATION INSTRUCTIONS:

Tools required for installation: Slotted screwdriver, Pliers, Wire Cutters, Wire connectors and Electrical tape.

Note: If this fixture is being installed in Canada, please refer to Figure2, page2 of this sheet for special mounting instructions.

1. Carefully unpack all parts referring to illustration Figure 1 for parts identification.
2. Turn power to the installation point OFF.
3. Locate **FIXTURE CHAIN ASSEMBLY**. Adjust **CHAINS** to desired length by removing chain links. Please note that depending on chain thickness, you may be required to use chain pliers to spread links open. Attach top ends of **FIXTURE CHAIN ASSEMBLY** onto **LOOP** on the side of **CEILING CANOPY**. Proceed to locate the end of **FIXTURE CHAIN ASSEMBLY** onto the **MAIN ASSEMBLY**. Pass fixture wires through one chain alternating links.
4. Locate the **CROSSBAR** and attach to ceiling mounted outlet box using (2) **OUTLET BOX SCREWS** (not supplied). Locate the **NIPPLE** with **HEX NUTS** and **SHAKE PROOF WASHER**. Pass the **SHAKE PROOF WASHER** over the end of the **NIPPLE** and thread **NIPPLE** into the center of the **CROSSBAR**. Using pliers, **HEX NUT** against **CROSSBAR** to sure **NIPPLE**.
5. **Make the connections:** Quoizel recommends a minimum of (2) people for the next (2) steps. Trim the **FIXTURE SUPPLY** and **GROUND WIRES** to approx. 6" in the length from where wires exit **FIXTURE CANOPY**. Trim back wire jacketing approx. 3/4". Position the fixture under the **OUTLET BOX**. Attached **HOUSE GROUND WIRE** to **FIXTURE GROUND WIRE**. Proceed to attach both to the **CROSSBAR** using **GROUND SCREW**. Using wire connectors (not supplied) connect the **HOUSE WHITE WIRE** to the **FIXTURE SUPPLY WIRE** (**RIBBED SIDE**); connect the **HOUSE BLACK (or RED) WIRE** to the **FIXTURE SUPPLY WIRE** (**SMOOTH SIDE**). Wrap all connections with approved electrical tape.
6. With the connections properly made, carefully tuck all wires into **OUTLET BOX**. Pass the **MOUNTING HOLE** in the underside of the **CEILING CANOPY** over the **NIPPLE**, attach to **CROSSBAR**. Thread the **LOCK BALL** onto the end of the **NIPPLE**. Hand tighten **LOCK BALL** to secure fixture against the ceiling.
7. Locate the **SHADE HOLDERS** over **SOCKETS** onto **BOBECHE**s. Proceed to locate **SHADES** over **SOCKETS** seating into **SHADE HOLDERS**. Using **SOCKET COLLAR TOOL**, threading **SOCKET COLLAR** onto the **SOCKET** and tighten until snug to secure the **SHADE**.
8. Install bulbs referring to fixture markings and/or labels for maximum wattage.
9. Restore power to installation point ON. Keep this sheet for future reference.




**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
 CONSULT A LICENSED ELECTRICIAN!**

INSTALLATION INSTRUCTIONS: (FOR FIXTURES OVER 25 LBS. (Canada Only)

Please use the information outlined in this sheet for the ceiling installation part of your fixture assembly.

Quoizel recommends a licensed electrician or contractor be consulted for this installation.

FIGURE 2.

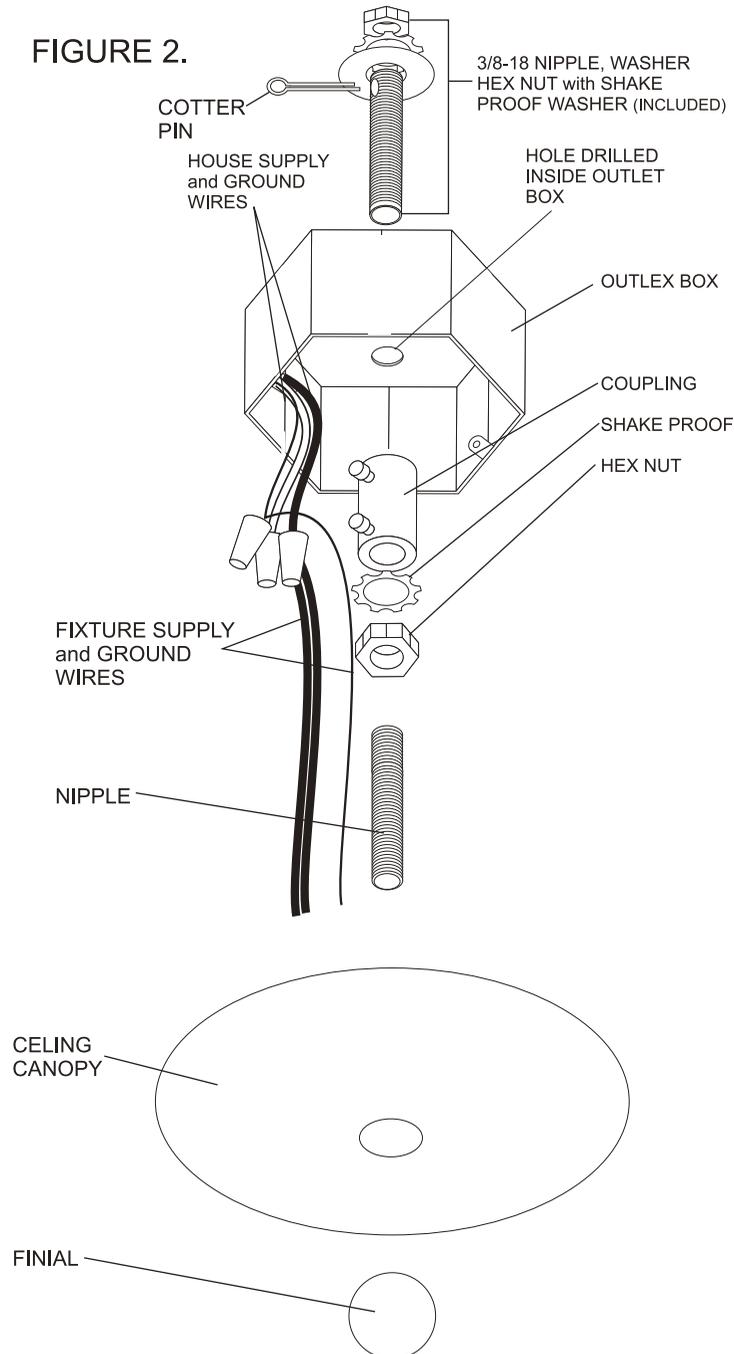

1. Before installing fixture, carefully unpack and identify all parts referring to illustration FIGURE 2. Be sure the power to the installation point is OFF.
2. The weight of this fixture will require a means of support independent of the OUTLET BOX. This fixture must be supported by 3/8-18 NPSM NIPPLE (supplied). The NIPPLE should be positioned so that 3/4" protrudes into the OUTLET BOX cavity. **Note: the opposite end of the NIPPLE must be attached to a structural or bridging member of sufficient strength to support the fixture weight.** A COTTER PIN has been included and should be installed into the top of 3/8-18 NPSM NIPPLE, above HEX NUT for added safety. A clearance hole must be drilled on the inside top center of the OUTLET BOX. Please refer to Figure 3, page 3 for detailed illustration. We recommend the consultation of a licensed electrician or contractor due to the complexity of this installation.
3. With the 3/8-18 NPSM NIPPLE properly situated, locate COUPLING and proceed to thread onto the end of the NIPPLE protruding into the OUTLET BOX. Thread COUPLING onto pipe until tight. Tighten the top SET SCREW with pliers to secure COUPLING to NIPPLE. Locate the NIPPLE and thread HEX NUT onto top end. Pass SHAKE PROOF WASHER over top end. Thread top end of NIPPLE into the COUPLING. Using pliers, snug HEX NUT up against the COUPLING.
4. (Refer to FIGURE 1, Page 1) Locate FIXTURE CHAIN ASSEMBLY. Adjust CHAINS to desired length by removing chain links. Please note that depending on chain thickness, you may be required to use chain pliers to spread links open. Attach top ends of FIXTURE CHAIN ASSEMBLY onto HOOKS on the side of CEILING CANOPY. Proceed to locate the end of FIXTURE CHAIN ASSEMBLY onto the MAIN ASSEMBLY. Pass fixture wires through one chain alternating links.
5. **Make the connections:** Quoizel recommends a minimum of (2) people for the next (2) steps. Trim the FIXTURE SUPPLY and GROUND WIRES to approx. 6" in the length from where wires exit FIXTURE CANOPY. Trim back wire jacketing approx. 3/4". Position the fixture under the OUTLET BOX. Attach HOUSE GROUND WIRE to FIXTURE GROUND WIRE. Proceed to attach both to the CROSSBAR using GROUND SCREW. Using wire connectors (not supplied) connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (SMOOTH SIDE). Wrap all connections with approved electrical tape.
6. With the connections properly made, carefully tuck all wires into OUTLET BOX. Pass the MOUNTING HOLE in the underside of the CEILING CANOPY over the NIPPLE. Thread the LOCK BALL onto the end of the NIPPLE. Hand tighten LOCK BALL to secure fixture against the ceiling.
7. Locate the SHADE HOLDERS over SOCKETS onto BOBECHEs. Proceed to locate SHADES over SOCKETS seating into SHADE HOLDERS. Using SOCKET COLLAR TOOL, threading SOCKET COLLAR onto the SOCKET and tighten until snug to secure the SHADE.
8. Install bulbs referring to fixture markings and/or labels for maximum wattage.
9. Restore power to installation point ON. Keep this sheet for future reference.

FIGURE 3: CRAWL SPACE / ATTIC CUT-AWAY

