


ASSEMBLY / INSTALLATION INSTRUCTIONS:
For Canadian installations please refer to page 2.

FIGURE 1.

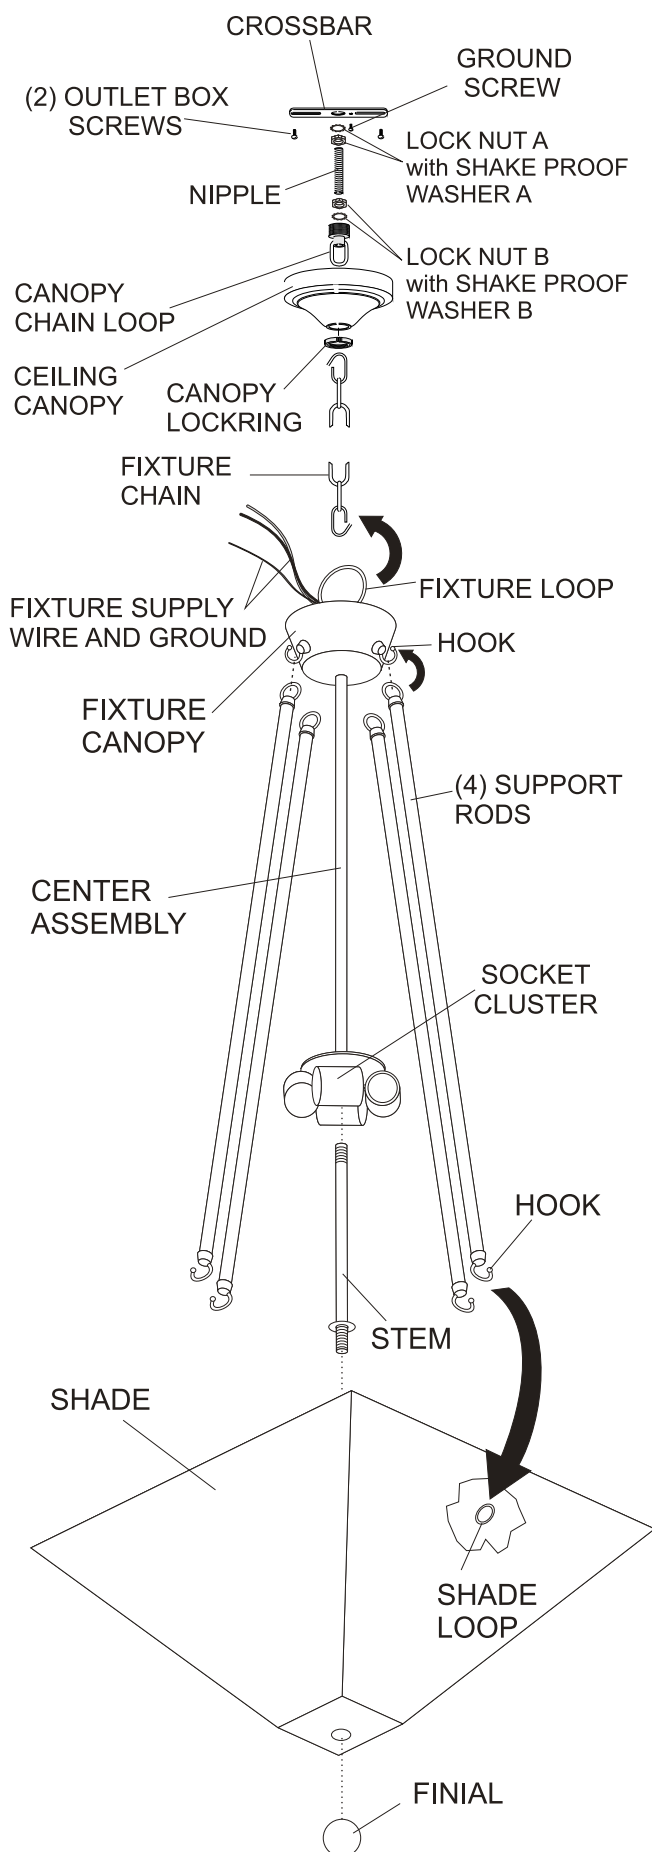

1. Before beginning installation, carefully unpack and identify all parts referring to illustration FIGURE 1.
2. Locate the CENTER ASSEMBLY and unravel FIXTURE SUPPLY WIRE AND GROUND. Put assembly to the side.
3. **(For Canadian installations please refer to Page 2)** Locate the CROSSBAR and with power to installation point **OFF**, secure to OUTLET BOX with (2) OUTLET BOX SCREWS (not supplied). Locate LOCK NUT A and SHAKE PROOF WASHER A. Thread LOCK NUT A and SHAKE PROOF WASHER A onto top end of NIPPLE. Thread NIPPLE into the center of CROSSBAR. Locate LOCK NUT B and thread onto bottom end of NIPPLE. Tighten LOCK NUT A against CROSSBAR with pliers until snug.
4. Locate the FIXTURE CHAIN and determine desired hanging height of fixture. Adjust chain by removing links if needed. Please note that depending on chain material thickness, you might be required to use chain pliers to spread links open. Proceed to attach one end of chain to FIXTURE LOOP, attached to top of fixture. Unravel FIXTURE SUPPLY and GROUND and pass through FIXTURE CHAIN alternating links. Proceed to pass the fixture wires through the following mounting components in this order: 1) CANOPY LOCK RING, 2) CEILING CANOPY, 3) CANOPY CHAIN LOOP 4) SHAKE PROOF WASHER B.
5. **Make the wiring connections: (Quoizel recommends (2) people for next 3 steps)** Position the fixture underneath the CEILING MOUNTED OUTLET BOX. and pass SUPPLY and GROUND WIRE through the center of NIPPLE. Connect the HOUSE GROUND wire and the FIXTURE GROUND wire to UNIVERSAL CROSSBAR using GROUND SCREW (green). Using wire connectors (not supplied), connect the HOUSE WHITE WIRE to the FIXTURE WHITE (or RIBBED SIDE) WIRE; connect the HOUSE BLACK (or RED) WIRE to the FIXTURE BLACK (or SMOOTH SIDE) WIRE. Make sure there are no exposed wires and wrap all connections with approved electrical tape.
6. Carefully tuck in all wiring into the OUTLET BOX and thread the CANOPY CHAIN LOOP onto the bottom of NIPPLE. Thread LOCK NUT B and SHAKE PROOF WASHER B onto top of CANOPY CHAIN LOOP. Tighten with pliers. Locate the CEILING CANOPY over the CEILING MOUNTED OUTLET BOX and secure against ceiling by threading the CANOPY LOCK RING onto the CANOPY CHAIN LOOP. Proceed to attach the top of FIXTURE CHAIN to the CANOPY CHAIN LOOP. Carefully compress end of FIXTURE CHAIN to secure.
7. Install bulbs referring to fixture markings and/or labels for maximum wattage.
8. Locate STEM and thread into the bottom center of SOCKET CLUSTER.
9. Locate the SHADE and position the MOUNTING HOLE at the bottom of the SHADE over the STEM. Pass STEM through MOUNTING HOLE. Proceed to attach (1) HOOK at end of support rod to (1) SHADE LOOP inside of shade. Repeat process for remaining arms. Locate FINIAL and attach to end of STEM protruding from SHADE. Tighten until snug.
10. Attach tops of (4) SUPPORT RODS to the (4) HOOKS on the side of FIXTURE CANOPY. (Note: SUPPORT CHAINS may be substituted for rods depending on style purchased. Locate STEM and thread into the bottom center of the SOCKET CLUSTER.
11. Restore power to installation point.




IF IN DOUBT ABOUT ELECTRICAL INSTALLATION, CONSULT A LICENSED ELECTRICIAN!

INSTALLATION INSTRUCTIONS: (FOR FIXTURES OVER 25 LBS. (Canada Only))

Please use the information outlined in this sheet for the ceiling installation part of your fixture assembly.

Quoizel recommends a licensed electrician or contractor be consulted for this installation.

FIGURE 2.

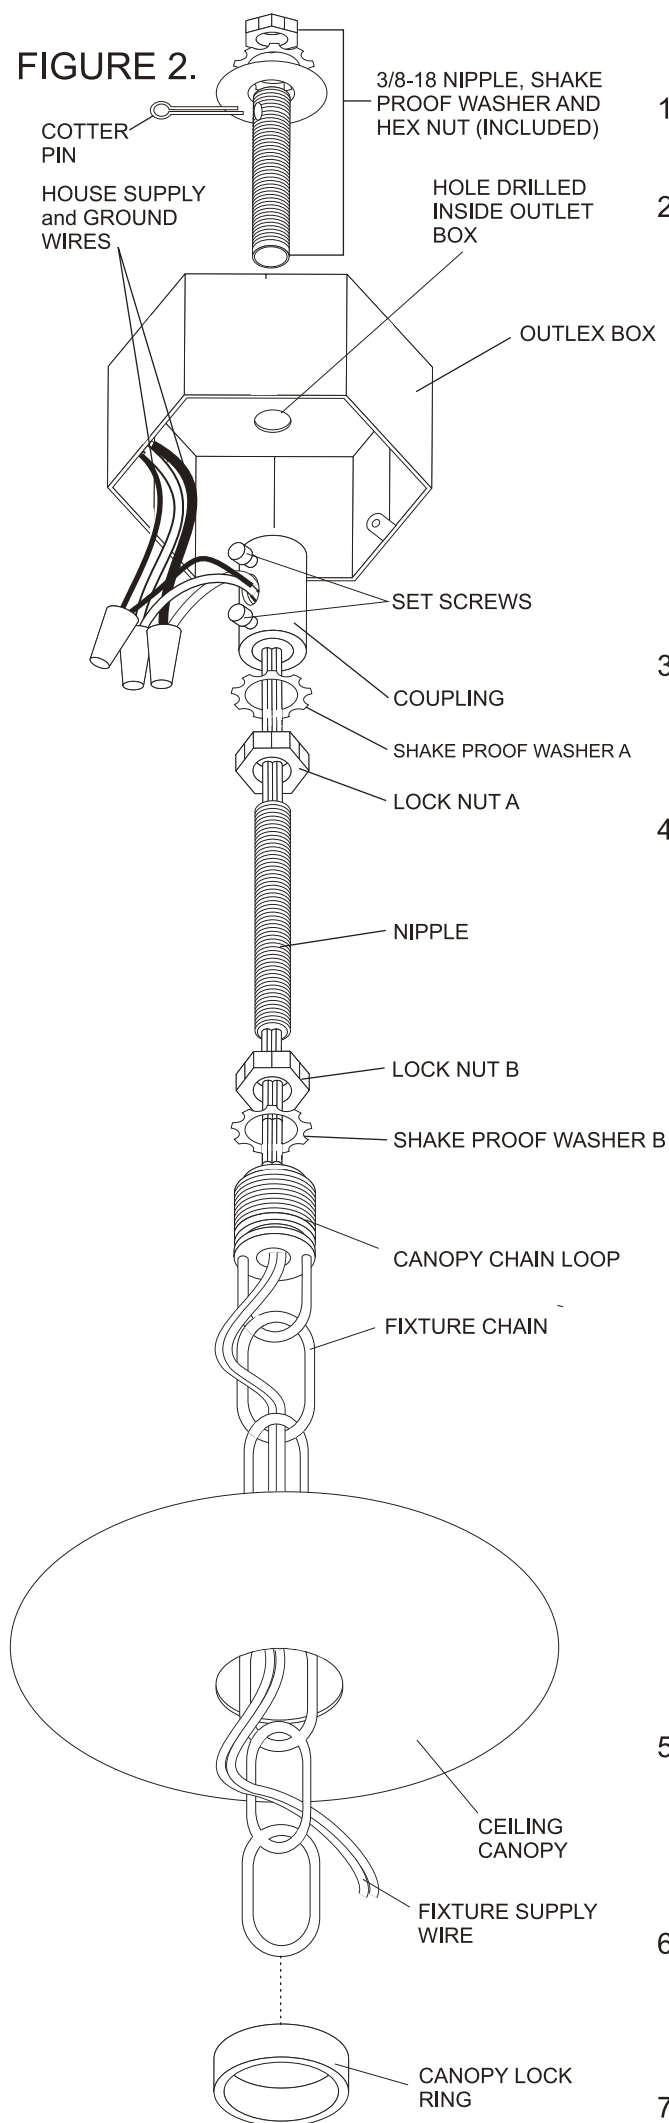

1. Before installing fixture, carefully unpack and identify all parts referring to illustration FIGURE 2. Be sure the power to the installation point is OFF.
2. **(Refer to Figure 3, page 3) This weight of this fixture will require a means of support independent of the OUTLET BOX. This fixture must be supported by 3/8-18 NPSM NIPPLE(supplied) The NIPPLE should be positioned so that 3/4" protrudes into the OUTLET BOX cavity. Note: the opposite end of the NIPPLE must be attached to a structural or bridging member of sufficient strength to support the fixture weight. A COTTER PIN has been included and should be installed into the top of NIPPLE, above HEX NUT for added safety. A clearance hole must be drilled on the inside top center of the OUTLET BOX. Please refer to Figure 3, page 3 for detailed illustration. We recommend the consultation of a licensed electrician or contractor due to the complexity of this installation.**
3. With the NIPPLE properly situated, locate COUPLING and proceed to thread onto the end of the NIPPLE protruding into the OUTLET BOX. Thread COUPLING onto pipe until tight. Tighten the top SET SCREW with pliers to secure COUPLING to NIPPLE.
4. **Making the connections: (Quoizel recommends (2) people for the rest of this installation)** Proceed to unravel the FIXTURE SUPPLY and GROUND WIRES. Locate the FIXTURE CHAIN and attach one end to the FIXTURE LOOP at the top of FIXTURE. Please note that depending on chain material thickness, you might be required to use chain pliers to spread chain links open. Proceed to pass the FIXTURE SUPPLY and GROUND WIRES through the chain, alternating links. Proceed the pass the wires through the following mounting components in this order: 1) CANOPY LOCK RING 2) CEILING CANOPY 3) CANOPY CHAIN LOOP 4) SHAKE PROOF WASHER B and LOCKNUT B 5) NIPPLE 6) LOCK NUT A and SHAKE PROOF WASHER A. Position the fixture over the OUTLET BOX and pass the fixture wires through the bottom center of the COUPLING. Pull wires through the wire way hole on side of COUPLING. Proceed to thread the NIPPLE into the bottom center of the COUPLING until tight. Tighten the LOWER SET SCREW. Proceed to thread LOCK NUT A and SHAKE PROOF WASHER A up NIPPLE until seated against the bottom of the COUPLING. Tighten until snug with pliers. Proceed to attach the FIXTURE GROUND WIRE to HOUSE GROUND WIRE using wire connector (not supplied). Using wire connectors (not supplied), connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE or RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE). Wrap all connections with approved electrical tape.
5. With the proper connections made, proceed to thread the CANOPY CHAIN LOOP onto the bottom of the NIPPLE. Proceed to attach the top of the FIXTURE CHAIN to the bottom of the CANOPY CHAIN LOOP. Proceed to thread LOCK NUT B and SHAKE PROOF WASHER B down onto the top of the CANOPY CHAIN LOOP. Tighten and snug with pliers.
6. Proceed to push the CEILING CANOPY upward over the OUTLET BOX. Be sure that all wires are carefully tucked into the OUTLET BOX cavity. Secure canopy against ceiling by threading CANOPY LOCK RING onto the CANOPY LOOP. Tighten until snug.
7. Return to Page 1, Step 7 to complete installation.

FIGURE 3: CRAWL SPACE / ATTIC CUT-AWAY

