

Series 1590BZ Small Well Light

Low Voltage Installation Instructions:



Note: Consult a qualified electrician for wiring instructions.

- 1). Remove the four **Top Screws** with a Philips head screw driver. Remove the **Ring** and **Lens**. Set aside for reuse in assembly.
- 2). Push Max 50w MR16 12volt Bulb (not supplied) into Bi-pin socket.
- 3). Clean any debris off of black **Rubber Gasket**. Not completing this step may cause the fixture to leak.
- 4). Reassemble fixture by following step #1 in reverse order.

This fixture is only for use with low voltage lighting power units.

Connect fixture wires with approved wirenuts for use in outdoor environments.

Not for use in or within 10 feet of a pool or spa.

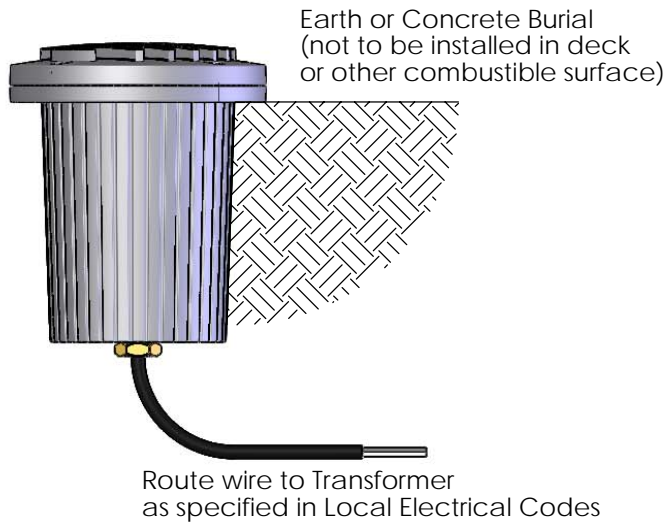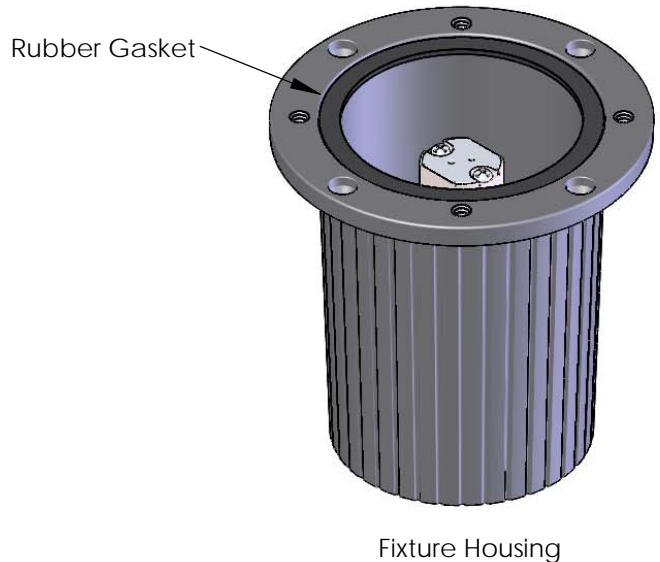

DRAWN BY: <i>Rob I</i>		DATE: 11/30/09	TITLE: Small Well Light Installation Instructions	
PROPRIETARY AND CONFIDENTIAL <small>THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF HINKLEY LIGHTING. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF HINKLEY LIGHTING IS PROHIBITED.</small>			SIZE: A	DWG. NO.: IS1590
				REV: -