


**ASSEMBLY/INSTALLATION**  
**INSTRUCTIONS:**

**FIGURE 1**

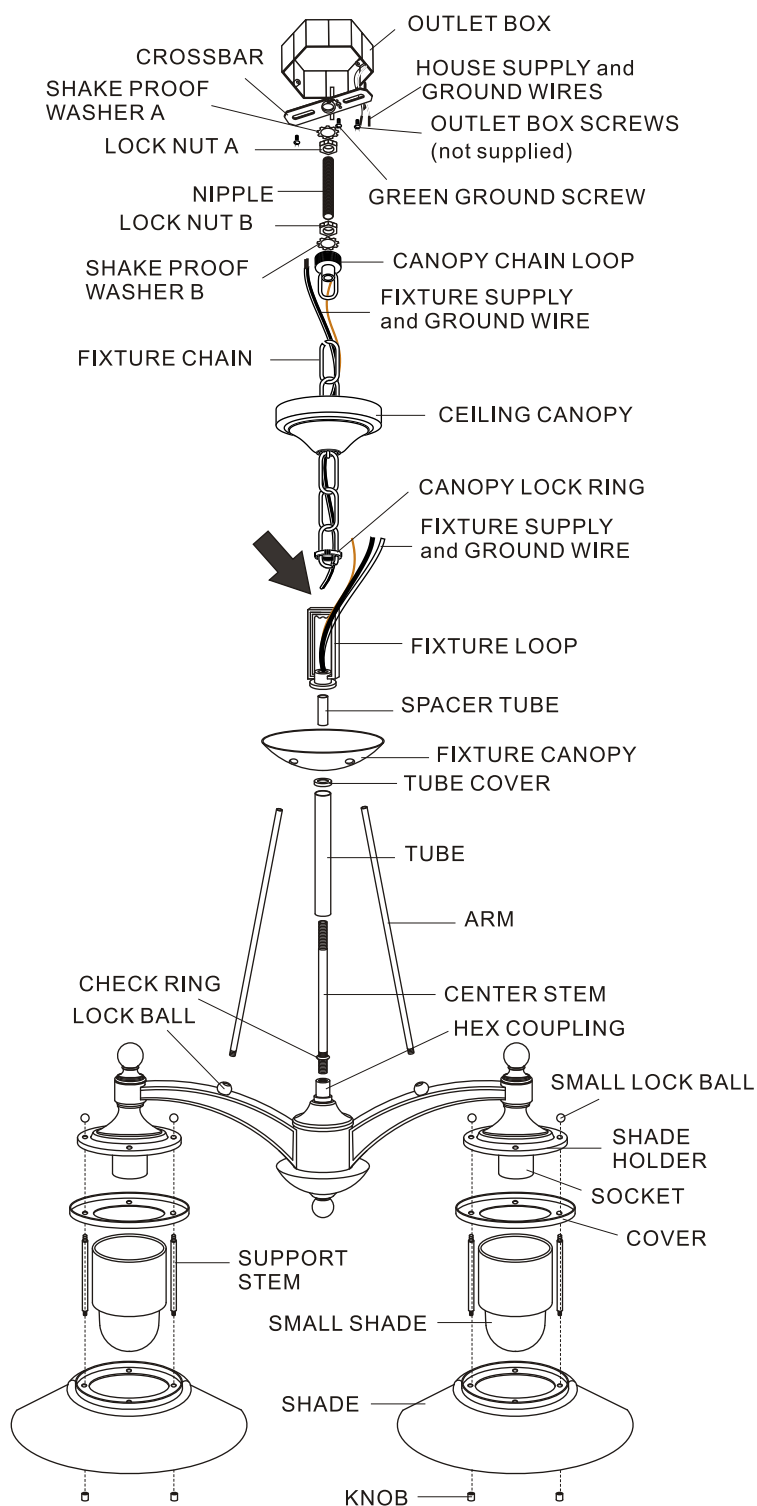

1. Before beginning fixture fabrication, carefully unpack all parts referring to illustration FIGURE 1 for parts identification.
2. Turn the power to installation point OFF.
3. Thread the end of CENTER STEM into HEX COUPLING on the top center of JUNCTION BOX. Thread CHECK RING against HEX COUPLING and tighten until snug.
4. Thread ends of ARMS into LOCK BALLS and hand tighten until snug. Proceed to locate TUBE and TUBE COVER over CENTER STEM onto top end of JUNCTION BOX. Locate FIXTURE CANOPY onto top end of CENTER STEM. The top ends of ARMS will through the holes on the side of FIXTURE CANOPY. Secure them by locating SPACER TUBE over top end of CENTER STEM and threading FIXTURE LOOP onto top end of CENTER STEM. Hand tighten until snug.
5. Fasten the CROSSBAR to the OUTLET BOX with (2) OUTLET BOX SCREWS(not supplied). Proceed to thread LOCK NUT A and SHAKE PROOF WASHER A onto the top end of NIPPLE. Thread NIPPLE into the center of CROSSBAR. Locate the LOCK NUT B onto the bottom end of the NIPPLE. Tighten LOCK NUT A against CROSSBAR with plier until snug.
6. Locate the FIXTURE CHAIN and determine desired hanging height of fixture. Adjust chain by removing links if needed. Please note that depending on chain material thickness, you might be required to use chain pliers to spread links open. Proceed to attach one end of chain to FIXTURE LOOP, attached to top of fixture. Pass the fixture wires through the FIXTURE CHAIN alternating links. Proceed to pass the fixture wires through the following mounting components in this order: 1)CANOPY LOCK RING; 2)CEILING CANOPY.
7. **Making the connections:**(2 people recommended for the remaining steps) Position the fixture under the ceiling mounted outlet box. Pass SHAKE PROOF WASHER B over the NIPPLE. Thread CANOPY CHAIN LOOP onto NIPPLE. Thread LOCKNUT B down the NIPPLE, against the CANOPY CHAIN LOOP and snug with pliers. Pass the wires through the NIPPLE. Take up wire slack and trim wires so that approx. 6" will remain inside outlet box. Proceed to attach the top of the FIXTURE CHAIN to the bottom of the CANOPY CHAIN LOOP. Proceed to attach the FIXTURE and HOUSE GROUND WIRES to the CROSSBAR with GREEN GROUND SCREW. Using wire connectors(not supplied) connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE or RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE(BLACK or SMOOTH SIDE). Wrap all connections with approved electrical tape.
8. With the proper connections made, proceed to push the CEILING CANOPY upward over the OUTLET BOX. Be sure that all wires are carefully tucked into the OUTLET BOX cavity. Secure canopy against ceiling by threading CANOPY LOCK RING onto the CANOPY LOOP. Tighten until snug.
9. Locate COVERS inside of SHADE HOLDERS. Proceed to locate one ends of SUPPORT STEMS through holes on the SHADE HOLDERS. Thread SMALL LOCK BALLS onto the SUPPORT STEMS. Hand tighten until snug.
10. Install bulbs referring to fixture markings and/or labels for maximum wattage.
11. Locate SMALL SHADES over bulbs. Proceed to locate SHADES onto SMALL SHADES. Match the holes on SHADES with the other ends of SUPPORT STEMS. Secure them by threading KNOBS onto the end of SUPPORT STEMS. Hand tighten until snug.
12. Restore power to the installation point ON. Retain this sheet for future reference.