


ASSEMBLY AND INSTALLATION INSTRUCTIONS

AS-CHD005

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

**NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.**

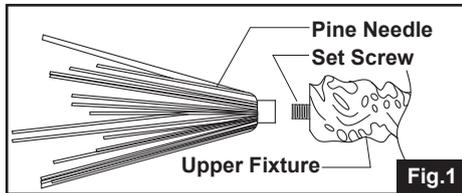

1. Attach nipple(-a) to the mounting strap, then secure it with a washer and hex nut.
2. Attach the mounting strap to the outlet box by using two mounting screws.
3. Adjust the arms of the fixture according to the drawing of the package.

Important:

- a. The arms should be positioned with equal distances between them.
- b. The arms should be fixed securely.

4. Attach the upper fixture onto the main fixture by securing nipple(-b) into the coupling.
5. Choose the length of the chain you need, connect the big link to the hook. Then weave the fixture wire and the fixture grounding wire through the chain.
6. Secure the top loop to nipple(-a).
7. Thread the fixture wire and fixture grounding wire through the collar, canopy, top loop, nipple(-a) and mounting strap.
8. Connect the link on the other end of the chain with the top loop by using the loop lock.
9. Pull out the outlet wires and the house grounding wire from the outlet box. Make wire connections using the wire nuts:
 - The smooth wire (marked) from the fixture to the black wire from the power source.
 - The ridged wire (unmarked) from the fixture to the white wire from the power source.
 - Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with a wire nut.
 Carefully put the wires back into the outlet box.
10. Attach the canopy to the mounting strap by inserting the top loop, then secure it with the collar.
11. Secure the finial to nipple(-c).
12. Attach the glass shades to the glass holders, and secure them with the socket rings.
13. Install bulbs (not included). See the label at socket area or packaging for maximum allowed wattage.
14. Secure the pine needles onto the set screws of the upper fixture. (See Fig.1)
15. Turn on the power at the main fuse or circuit breaker box.

