

ASSEMBLY AND INSTALLATION INSTRUCTIONS


LK55416 / LK55516 / LK55616 / LK55716

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. The combined weight of your ceiling fan and light kit cannot exceed 35 pounds unless additional support is provided for the fan.

WARNING:

As per EPACK 2005 requirements, this fan light has a built-in current limiting device to conserve energy. Please do not operate it with lamps that together consume more than 190 watts. If the fan light shut off shortly after it was switched on, it may be due to excessive current demand. Turn off power to the fan and replace the light bulbs with lower wattage bulbs. Powers up again by pull chain or wall switch or remote control depend on what is installed with the particular fan.

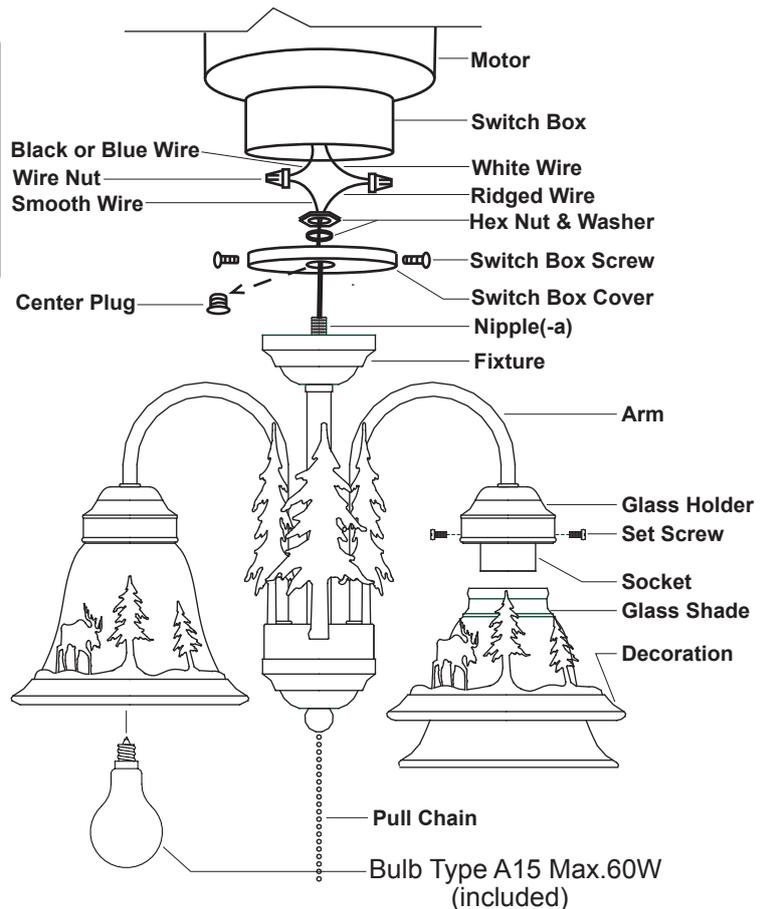

For Light Kit:

1. Remove the switch box cover from the switch box of the fan by loosening the three switch box screws.
2. Unscrew the center plug from the switch box cover and discard it.
3. Attach nipple(-a) of the light kit to the switch box cover, then secure it with a washer and hex nut.
4. Pull out the wires from the switch box.
Make wire connections using the wire nuts:
 - The smooth (marked) wire from the fixture to the black (or blue) wire from the switch box.
 - The ridged (unmarked) wire from the fixture to the white wire from the switch box.Carefully put the wires back into the switch box.
5. Attach the switch box cover back to the switch box using the three switch box screws.
6. Carefully place the decorations onto the glass shades. Then attach the glass shades to the glass holders and secure them with the set screws.
7. Install bulbs (included). See relamping label at socket area or packaging for maximum allowed wattage.
8. Turn on the power at the main fuse or circuit breaker box. (You can control the light with the pull chain.)

For Mini Chandelier: (See Fig.1 & Fig.2)

1. Take out the loop, grounding pad and washer from the hardware package for Mini Chandelier.
2. Adjust the hex nut on nipple(-a) to make a length of 1/2" from the top of nipple(-a) to the top of the hex nut. (See Fig.1)
3. Attach a washer and the grounding pad to the hex nut on nipple(-a), then secure them with the loop.
4. Choose the length of the chain you need, then weave the fixture wire and the fixture grounding wire through the chain. Then connect one end of the chain with the loop by using one loop lock.
5. Secure the top loop to nipple(-b).
6. Thread the fixture wire and fixture grounding wire through the collar, canopy, top loop, nipple(-b) and mounting strap.
7. Connect the other end of the chain with the top loop by using the other loop lock.
8. Pull out the outlet wires and the house grounding wire from the outlet box. Make wire connections using the wire nuts:
 - The smooth wire (marked) from the fixture to the black wire from the power source.
 - The ridged wire (unmarked) from the fixture to the white wire from the power source.
 - Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with a wire nut.Carefully put the wires back into the outlet box.
9. Attach the canopy to the mounting strap by inserting the top loop, then secure it with the collar.
10. Repeat the steps 6~8 for Light Kit.

