

ASSEMBLY AND INSTALLATION INSTRUCTIONS

PD33088

WARNING: TO AVOID RISK OF ELECTRIC SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

Installation Steps

1. Attach the nipple-1 to the mounting strap, and then secure with a washer and a hex nut.
2. Attach the mounting strap to the ceiling box by using two mounting screws.
3. Secure the antler to the nipple-3 tightly.
4. Secure the loop to the nipple-2 in the top of the antler.
5. Choose the certain length of the chain you need, and then weave the fixture wire and the grounding wire through the chain links. Then connect one end link of the chain with the loop by using the loop lock.
6. Thread the fixture wire and grounding wire through the collar, top loop ,canopy, nipple-1 and mounting strap in order.
7. Secure the top loop to the nipple-1, and connect the link on the other end of the chain with the top loop by using the loop lock.
8. Make wire connections with wire nuts:
 - The smooth wire (marked) from fixture to the black wire from power source.
 - The ridged wire (unmarked) from fixture to the white wire from power source.
 - Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with the wire nut.Carefully tuck wires back into the ceiling box.
9. Attach the canopy to the mounting strap by inserting the top loop, and secure with the collar.
10. Install bulbs. **(Please do not exceed the maximum capacity that is recommended on the package.)**
11. Attach the glass shade upwards to the socket set by inserting the nipple-4, and then secure with rubber pad metal pad and hex nut.
12. Attach the cap upward to the glass shade, and then secure with the finial.
13. Turn on the power at fuse or circuit box.

