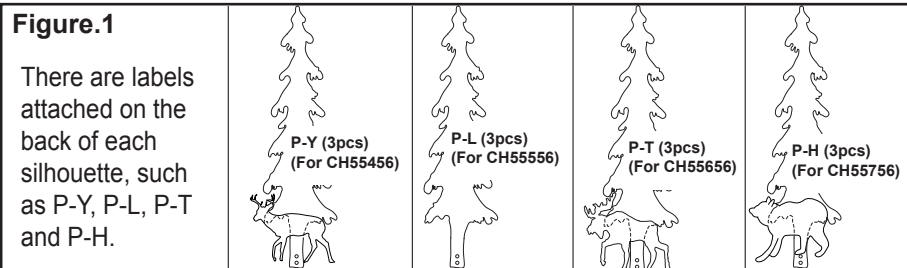# ASSEMBLY AND INSTALLATION INSTRUCTIONS

CH55456 / CH55556 / CH55656 / CH55756

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

Figure.1

There are labels attached on the back of each silhouette, such as P-Y, P-L, P-T and P-H.

P-Y (3pcs) (For CH55456)
P-L (3pcs) (For CH55556)
P-T (3pcs) (For CH55656)
P-H (3pcs) (For CH55756)

1. Attach nipple(-a) to the mounting strap, then secure it with a washer and hex nut.
2. Attach the mounting strap to the outlet box by using two mounting screws.
3. Secure the top loop to nipple(-a).
4. Carefully attach the upper fixture onto the holder by securing the rod to nipple(-b).
5. Adjust the arms of the fixture according to the drawing of the package.
   Important:
    a. The arms should be positioned with equal distances between them.
    b. The arms should be fixed securely.
6. Attach the silhouettes to the holder by aligning holes, and then secure them with set screws. The silhouettes should be placed as shown in Fig.1 when look the fixture from downward or upward.
   a. Use the tree side of the silhouettes which marked "P-T" or "P-Y" or "P-H" touch the holder.
   b. You can install the silhouettes which marked P-Y (for CH55456) or marked P-L (for CH55556) or marked P-H (for CH55756) to the location of silhouettes which marked P-T (for CH55656) shown in right graph to replace them.
7. Choose the length of the chain you need, then weave the fixture wire and the fixture grounding wire through the chain, collar and canopy.
8. Connect one end of the chain with the loop by using a loop lock.
9. Connect the other end of the chain with the top loop by using another loop lock.
10. Thread the fixture wire and fixture grounding wire through the top loop, nipple(-a) and mounting strap.
11. Pull out the outlet wires and house grounding wire from the outlet box. Make wire connections using the wire nuts:
    ---The smooth wire (marked) from the fixture to the black wire from the power source.
    ---The ridged wire (unmarked) from the fixture to the white wire from the power source.
    ---Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with a wire nut. Carefully put the wires back into the outlet box.
12. Attach the canopy to the mounting strap by inserting the top loop, then secure it with the collar.
13. Attach the glass shades to the glass holders, then secure them with socket rings.
14. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
15. Turn on the power at the main fuse or circuit breaker box.

Outlet Box
House Grounding Wire
Wire Nut
Hex Nut
Washer
Mounting Strap
Green Grounding Screw
Mounting Screw
Nipple(-a)
Canopy
Top Loop
Collar
Loop Lock
Fixture Grounding Wire
Chain
Loop Lock
Fixture Wire
Loop
Upper Fixture
Rod
Bulb Type A Max.100W (not included)
Nipple(-b)
Silhouette Marked "P-U" (3pcs)
Set Screw
Socket Ring
Silhouette Marked "P-T" (3pcs)
Set Screw
Holder
Arm
Glass Shade
Glass Holder

Silhouette Marked "P-U" (For all items)
Silhouette Marked "P-T"
Fig.1
Silhouette Marked "P-U"
Silhouette Marked "P-U"
Silhouette Marked "P-T" (For CH55656)
Silhouette Marked "P-T"
Silhouette Marked "P-T"
Silhouette Marked "P-U"

vaxcel

110319