

# CRYSTORAMA



1958

95 Cantiague Rock Road , Westbury NY 11590


ph: 516.931.9090 fax: 516.931.1254

info@crystorama.com, www.crystorama.com

## MODEL#: 5793-AB ASSEMBLY AND DRESSING INSTRUCTIONS



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

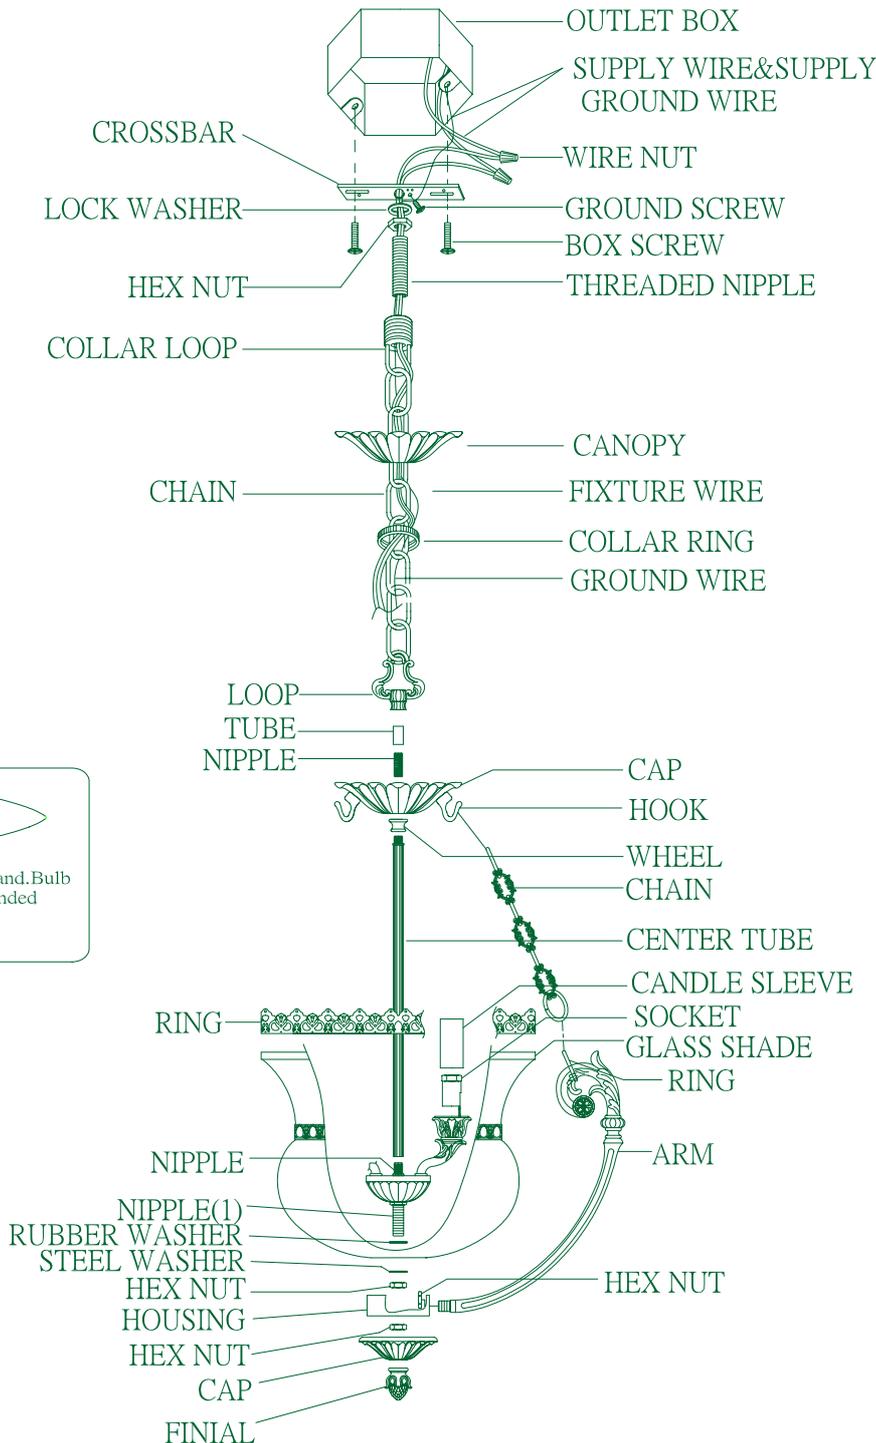

You will need 12-cand. Bulb  
60 Watts Recommended  
Bulb not included

## **FIXTURE ASSEMBLY, MOUNTING, AND WIRING INSTRUCTIONS:**

Carefully remove the fixture out of the carton and check that all parts are included, referring to the above illustration. Make sure that the electricity is turned off.

Split the conductors of the fixture wire about 4 inches but be careful not to expose any of the wire inside of the insulation.

1. Connect the fixture ground wire to the outlet box ground wire using the wire nut.  
Connect the outlet box ground wire to the crossbar with the green hex-head ground screw to pre-tapped hole in the crossbar marked "GND".
2. Connect the half of the fixture wire that is white, marked, or has a ribbed surface, to the outlet box supply wire (WHITE). Connect the other half of the fixture wire that is black, unmarked, or has a smooth surface, to the outlet box supply wire (BLACK or RED). Use wire nut provided.
3. Spread the electrical splices so that the black wire is on one side of the outlet box and the white wire is on the other side.
4. Slide the canopy up into place against the ceiling. Slide the collar ring up and thread it onto the collar loop to secure the canopy in place.

When install the fixture :

1. Thread center tube onto nipple and wheel, then thread nipple into wheel, then slide the cap, tube onto nipple, and secure it with loop;
2. Install the arm through housing using hex nut, then slide the rubber washer, glass shade, steel washer, onto nipple(1), and secure them with hex nut, then slide the housing of the arm, hex nut, cap onto nipple(1), and secure them with finial;
3. Install the chain onto hook & ring of the arm;
4. Install the ring onto glass shade;
5. Put the candle sleeve onto socket;
6. The fixture is ready for lamping and installation!