

FREDRICK RAMOND

Replacement Parts: GLASS: R5960GL

FR40103, 40106, 40108

ASSEMBLY INSTRUCTIONS

The construction of this fixture will be accomplished by first assembling the main body of the fixture, making all necessary electrical connections, hanging the fixture from the ceiling and then installing the fixture shade.

SAFETY WARNING: Read wiring and grounding instructions [FRIS 18] and any additional directions. Turn power supply off during installation. If new wiring is required, consult a qualified electrician or local authorities for code requirements.

STEP 1

Note: It will be necessary to determine the length of rods you will require to hang your fixture at the desired height. After this has been established, please follow the instructions below.

- 1 Assemble the rods (R) by slipping them into the wire. Thread the first rod into the coupler (1) located at the top of the fixture - See Drawing 1.

NOTE: It is recommended that a 12" rod (R) be added first.


- 2 Continue adding rods (R) until desired length has been reached.

STEP 2 Refer to Hanging Instruction Sheet [FRIS19-81] to hang fixture. Then refer back to this sheet to continue fixture installation.


STEP 3

- 1 Prior to glass being installed, fixture can now be lamped accordingly with bulbs provided (1) - See Drawing 2.
- 2 After lamping, thread bulb shield (2) onto socket (3). Finger tighten only.
- 3 To install glass (4), compress spring clip (5) and slip glass over spring clip and down into glass cup (6). Repeat for remaining pieces of glass.

[DRAWING 1]

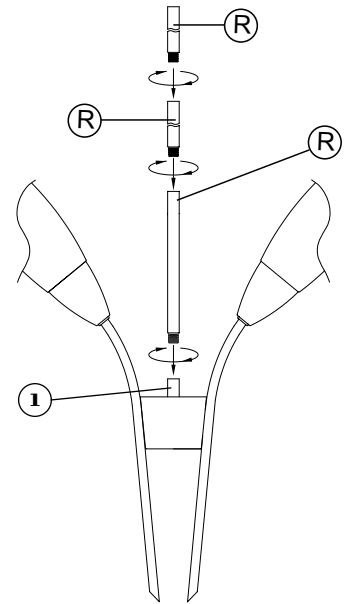

[DRAWING 2]

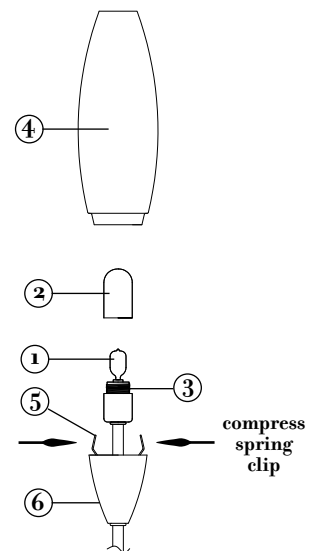

FREDRICK RAMOND
ESTABLISHED 1965

A Division of Hinkley Lighting, Inc.
33000 PIN OAK PARKWAY | AVON LAKE, OHIO 44012
toll free 800.446.5539 | phone 440.653.5500