

# FRANCESCA

## FR40318SLF

Bulbs: 60W CAND. Replacement Parts: CRYSTALS: R40310CRY / R40310CRY-B / R40315CRY

### ASSEMBLY INSTRUCTIONS

Assembly of this fixture will be accomplished by first installing the mounting hardware to the junction box, making all necessary electrical connections, mounting the fixture to the ceiling and then attaching the crystals.

**SAFETY WARNING:** Read wiring and grounding instructions [FRIS 18] and any additional directions. Turn power supply off during installation. If new wiring is required, consult a qualified electrician or local authorities for code requirements.


#### STEP 1

- 1 To assembly fixture first take fixture arms (a) and rotate them until they are arranged as outlined in Drawing 1. Arms alternate 60 degrees, then 30 degrees. Arms (b) are 90 degrees apart and evenly spaced between lower arms.
- 2 Slip loop (1) along supply wire and thread onto threaded tube (c) and tighten.
- 3 Slip candle sleeve (2) over socket (d).
- 4 Thread bottom decorative knob (3) onto threaded tube (e) at bottom of fixture.


#### STEP 2

- 1 It is recommend that the fixture be installed prior to attaching the crystals. Please follow mounting instruction sheet [FRIS 19] provided to hang the fixture.
- 2 After fixture is mounted please refer to crystal hanging instruction sheet to complete fixture assembly.

[DRAWING 1]

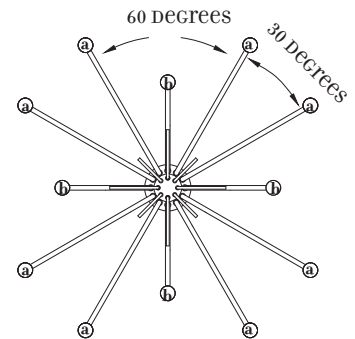

[DRAWING 2]

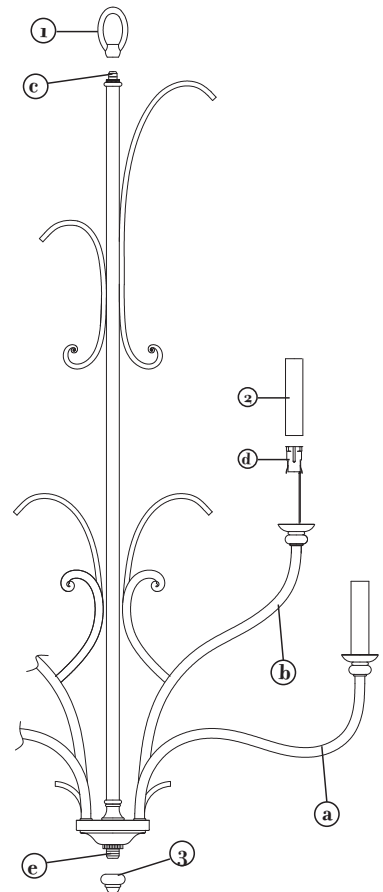

FREDRICK RAMOND  
ESTABLISHED 1965

A Division of Hinkley Lighting, Inc.  
33000 PIN OAK PARKWAY | AVON LAKE, OHIO 44012  
toll free 800.446.5539 | phone 440.653.5500

# FRANCESCA

## FR40318SLF


Bulbs: 60W CAND. Replacement Parts: GLASS: R40310CRY / R40310CRY-B / R40315CRY

### CRYSTAL INSTALLATION INSTRUCTIONS


There are 2 types of crystals that need to be installed on this fixture. It is recommended that the flower crystals be attached first, followed by the teardrop crystals, and then the compelled bobesches.

#### STEP 1 FLOWER CRYSTALS

- 1 All flower crystals (f) attach in the same manner. Their locations are illustrated in Drawing 1.
- 2 First remove ball knob with stud (b) and rubber washers (r) from location (1) on Drawing 1.
- 3 To attach flower crystal, first slip rubber washer (r) onto stud (s), next slip crystal flower (f) onto stud, followed by another rubber washer (r) - see Drawing 2 below.
- 4 Thread stud (s) into end of arms at locations (1) on Drawing 1.
- 5 After flower crystal is secure, attach one tear drop crystal (t) to end of ball knob stud (b).

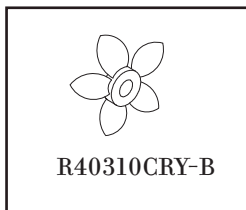


[DRAWING 2]



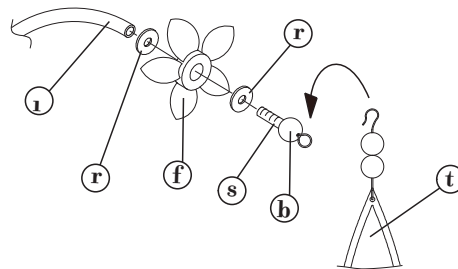


#### STEP 2 BOBESCHE ASSEMBLY

- 1 Take bobesche crystals (bc) and slip them over candle sleeve (cs) - see Drawing 2 and 3.
- 2 Take a teardrop crystal (t) and attach to bobesche crystal (bc) at location (2). Note: each bobesche requires 4 teardrop crystals.
- 3 One teardrop crystal is attached at the base of the fixture at location (3).

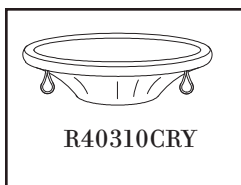

[DRAWING 3]

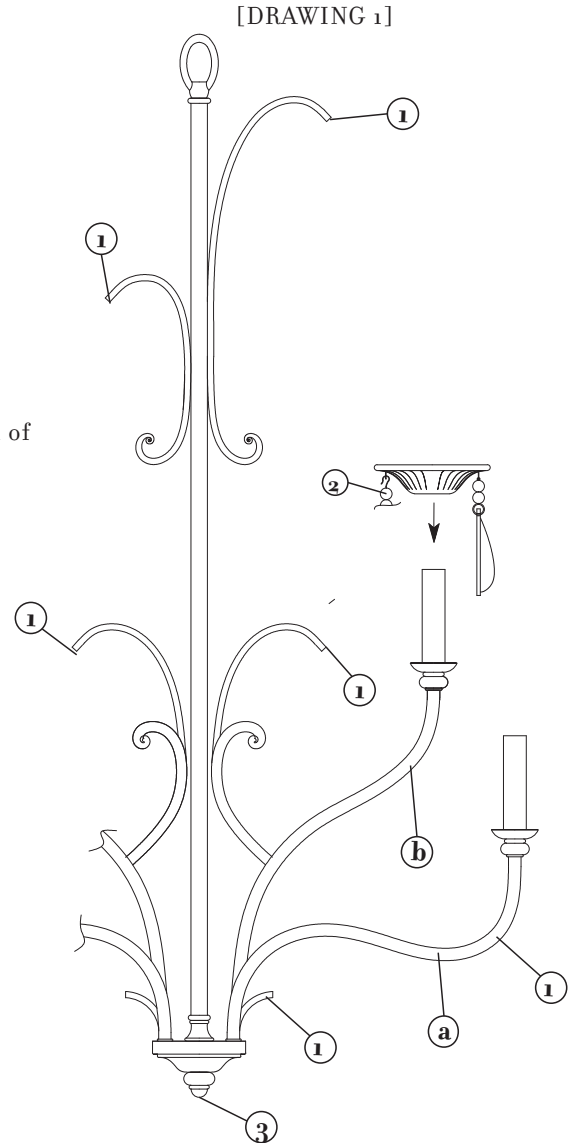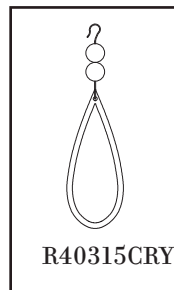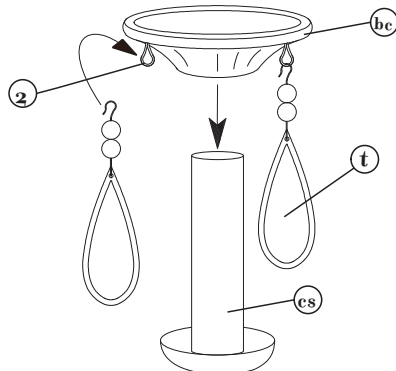

FREDRICK RAMOND  
ESTABLISHED 1965

A Division of Hinkley Lighting, Inc.  
33000 PIN OAK PARKWAY | AVON LAKE, OHIO 44012  
toll free 800.446.5539 | phone 440.653.5500