

FREDRICK RAMOND

FR42343PCM

ASSEMBLY INSTRUCTIONS

Assembly of this fixture will be accomplished by first assembling the primary fixture body, making all necessary electrical connections, hanging the fixture from the ceiling, and then installing the shades.

SAFETY WARNING: Read wiring and grounding instructions [FRIS 18] and any additional directions. Turn power supply off during installation. If new wiring is required, consult a qualified electrician or local authorities for code requirements.

STEP 1


- 1 To complete primary assembly of the fixture body, slip center tube (1) along wire and thread into top of fixture body (2) approximately 3/8" - See Drawing 1.
- 2 Slip wood center column (3) over center tube (1).
- 3 Slip top coupler (4) along wire and thread onto end of center tube (1) and tighten to secure wood center column (3). Sides of columns should be parallel to sides of lower body.
- 4 Determine the desired height the chandelier will be installed at.
The fixture is supplied with 1-6" stem and 2-12" stems. Determine what combination of stems needed to achieve desired length - see Drawing 2.
- 5 Slip stems over wire and thread first stem onto top of chandelier. Repeat this process until all required stems are threaded together.
- 6 Slip wire through center of canopy swivel and thread onto stem assembly.
- 7 Fixture is ready for installation.

STEP 2 Refer to Hanging Instruction Sheet [FRIS19-91] to hang fixture. Then refer back to this sheet to install crystals.


STEP 3

- 1 Slip candle sleeve (3) over socket (2) located on main body (1) - See Drawing 3.
- 2 Slip shade cup (4) of shade (5) onto top of candle sleeve (3).
- 3 fixture can be lamped accordingly at this time.


[DRAWING 1]

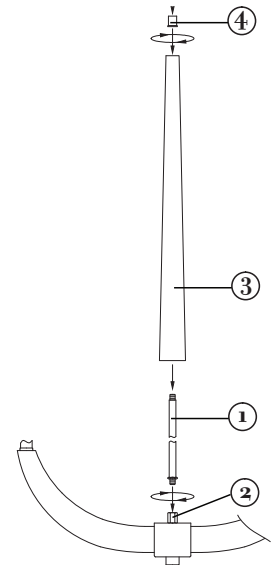

[DRAWING 2]

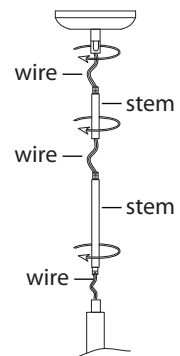

[DRAWING 3]

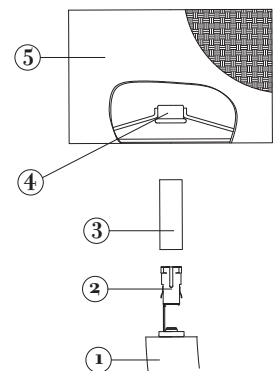

FREDRICK RAMOND
ESTABLISHED 1965

800.421.3517 WWW.FREDRICKRAMOND.COM

6.1.12