

BENTLEY

FR44501BBZ

Bulbs: 60W CAND. Replacement Parts: SHADE : R44500SH CRYSTAL: R44500CRY

ASSEMBLY INSTRUCTIONS

Assembly of this fixture will be accomplished by first installing the mounting strap to the junction box, making all necessary electrical connections, mounting the fixture to the ceiling, attaching the crystals, installing the candle sleeves and then attaching the shades.

SAFETY WARNING: Read wiring and grounding instructions [FRIS 18] and any additional directions. Turn power supply off during installation. If new wiring is required, consult a qualified electrician or local authorities for code requirements.

STEP 1

- 1 Assembly fixture by slipping center column (1) along wire and threading it onto stem (2). Making sure arm of the spiders (3) line up equally spaced between the arms (4) when it is tighten. It may be necessary to loosen hex nut inside canopy (5) to adjust spider location. Making sure to re-tighten hex nut when aligned correctly- See Drawing 2.

STEP 2


- 1 Prepare mounting strap (a) by threading the two long mounting screws (b) into the back of the mounting strap (a), making sure the holes into which the screws are threaded match the spacing of holes (d) in the canopy (e) - See Drawing 1.
- 2 Attach mounting strap (a) to junction box (j) using two screws (c).
- 3 Make electrical connections from supply wire to fixture lead wires. Refer to instruction sheet [FRIS18] and follow all instructions to make all necessary wiring connections. Then refer back to this sheet to continue installation of this fixture.
- 4 To mount fixture, slip the two mounting screws (b) through the two mounting holes (d) in the backplate (e).
- 5 While holding fixture in place, thread the two ball knobs (f) on to the end of the mounting screws (b), and tighten.

STEP 3 Make electrical connections from supply wire to fixture lead wires. Refer to instruction sheet (I.S. 18) and follow all instructions to make all necessary wiring connections. Then refer back to this sheet to continue installation of this fixture.


STEP 4

- 1 Slip stem cover (7) over stem (6) located at bottom of fixture.
- 2 Slip crystal bottom (8) over cover and hold in position, and thread decorative knob (9) and tighten to secure crystal.
- 3 Slip candle sleeve (1) over socket (2) - see Drawing 2.
- 4 Slip shade cup (3) onto top of candle sleeve (2).
- 5 Thread tail (4) onto bottom of arm assembly (5).
- 6 Attach crystal pendalogue (6) to end of arms (7).
- 7 Fixture can now be lamped accordingly.

[DRAWING 1]

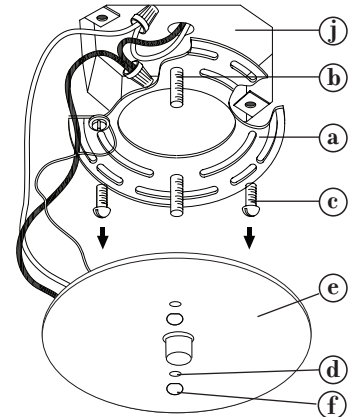

[DRAWING 2]

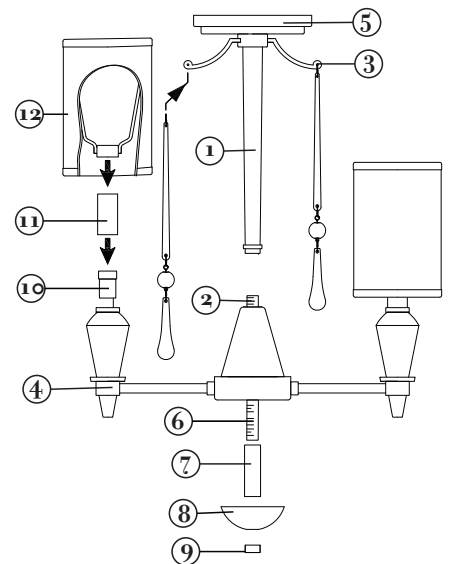

crystal 6
R44500CRY



FREDRICK RAMOND
ESTABLISHED 1965

800.421.3517 WWW.FREDRICKRAMOND.COM
01.01.10