


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WD-OPU090

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

**NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.**

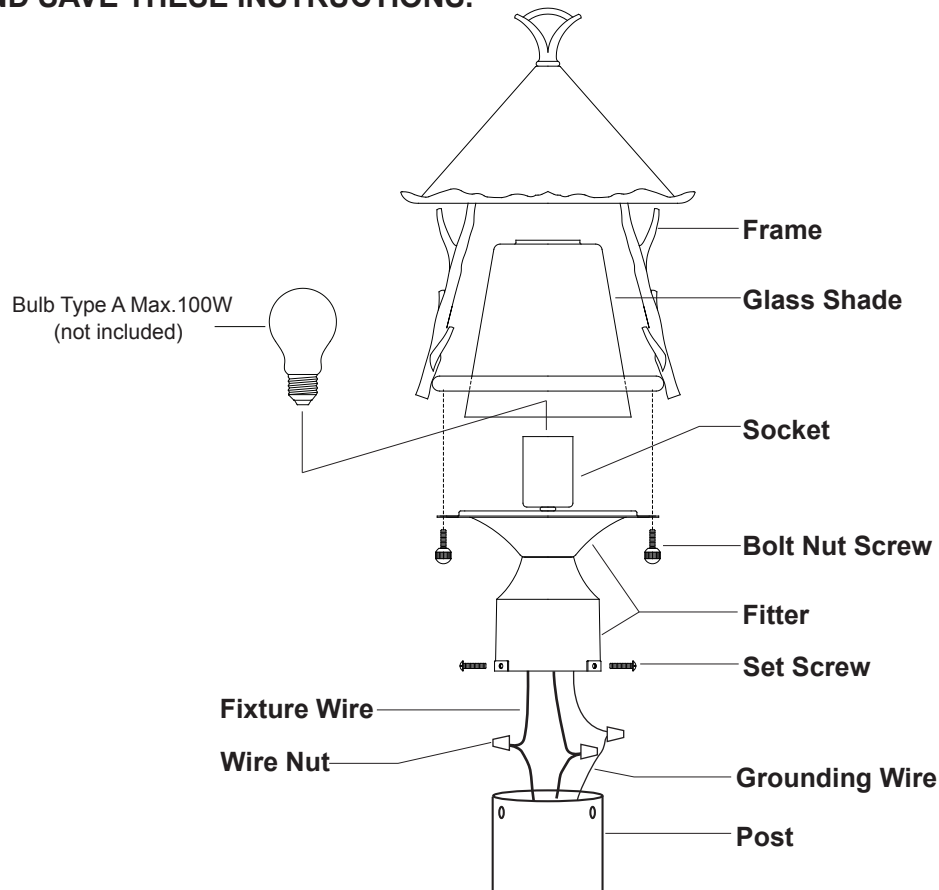

1. Unscrew the bolt nut screws from the frame.
2. Pull out the wires and grounding wire from the post. Make wire connections using the wire nuts:
 - The black wire from the fixture to the black wire from the post.
 - The white wire from the fixture to the white wire from the post.
 - The grounding wire from the fixture to the grounding wire from the post.Carefully put the wires back into the post.
3. Place the fitter on the post, then secure it with the set screws.
CAUTION: With silicone caulking compound, caulk completely around where the fitter meets with the post surface to prevent water from seeping into the post.
4. Install a bulb (not included). See relamping label at socket area or packaging for maximum allowed wattage.
5. Gently attach the glass shade and frame onto the fitter, then secure the frame using the bolt nut screws.
6. Turn on the power at the main fuse or circuit breaker box.