



## Installation Instructions (not to scale)

1. Tools Required : drill, 1/8" and 1/4" drill bits, center punch (or nail), flat head screw driver, silicon caulk, pliers.

2. Position attached templates on wall at desired location. Hold in place with masking tape.

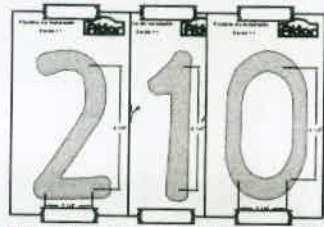

3. Mark the mounting holes as shown on templates with center punch (or nail). Remove templates from wall.

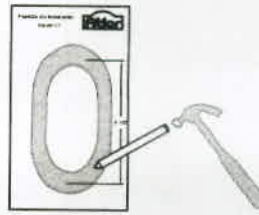


4. Drill 1/8" pilot holes 1/2" deep and then enlarge the pilot holes with 1/4" drill bit 1" deep.


5. Clean dust out of mounting holes.

### For Offset Mount:

6. Secure the long studs onto numbers

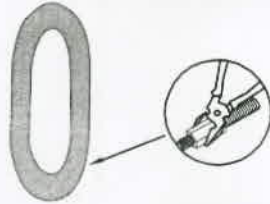


7. Insert studs (with number) into the mounting holes and confirm all studs fit the holes.

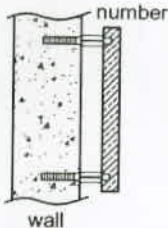


### For Flush Mount:

6. Secure the short studs onto numbers

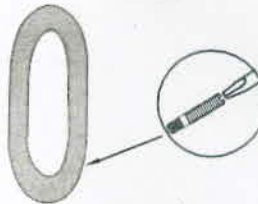

7. Insert studs (with number) into the mounting holes and confirm all studs fit the holes.

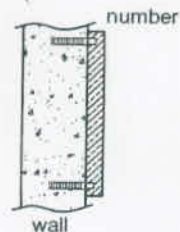

8. Remove number and fill mounting holes with silicon caulk.

9. Push the numbers into mounting holes and adjust the level if necessary.

10. Hold the numbers in place with masking tape until the caulk cures.

11. Remove the masking tape and trim away excess caulk with knife.