



INSTALLATION INSTRUCTION

INSTRUCCIONES DE INSTALACION

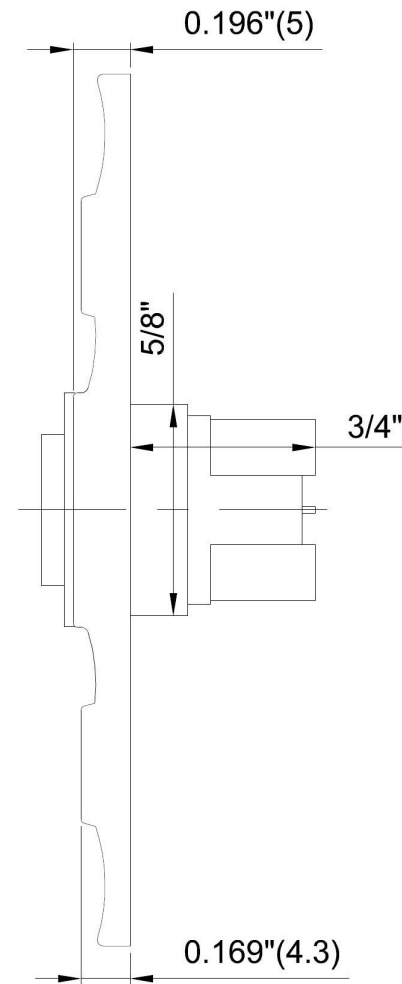

Wood Screw: 6#-15-1" X 2
 Metric Millimeters in Parenthesis

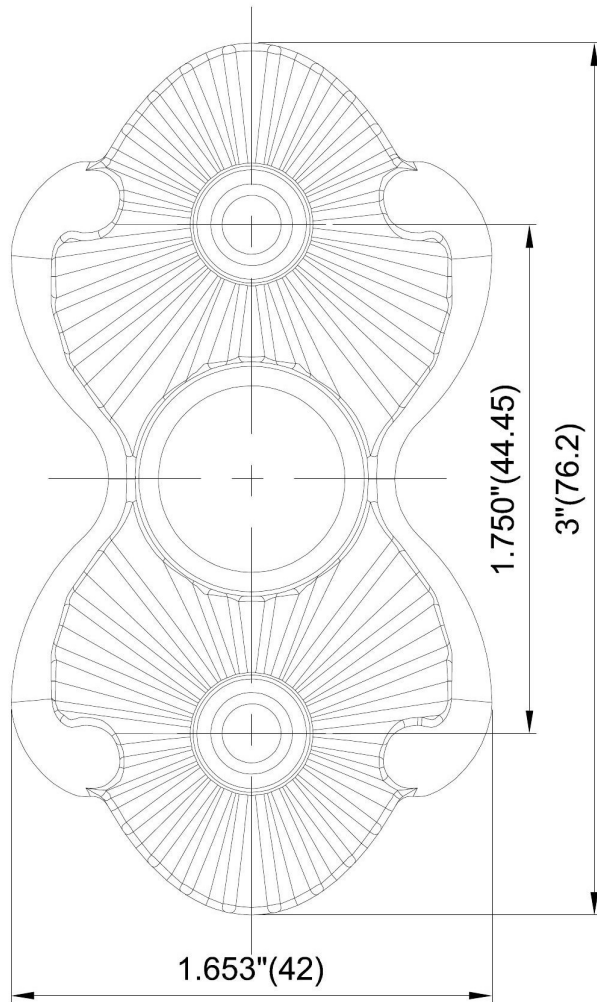

DB3	
DWG# : DB3	Rev. A
MAT'L : BRASS	DATE : 5/10/12