



# INSTALLATION INSTRUCTION

## INSTRUCCIONES DE INSTALACION

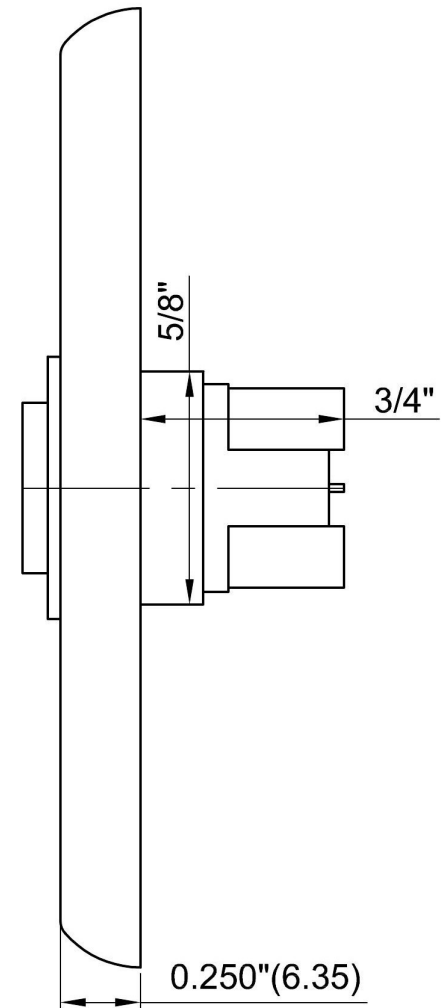

Wood Screw: 6#-15-1" X 2  
Metric Millimeters in Parenthesis

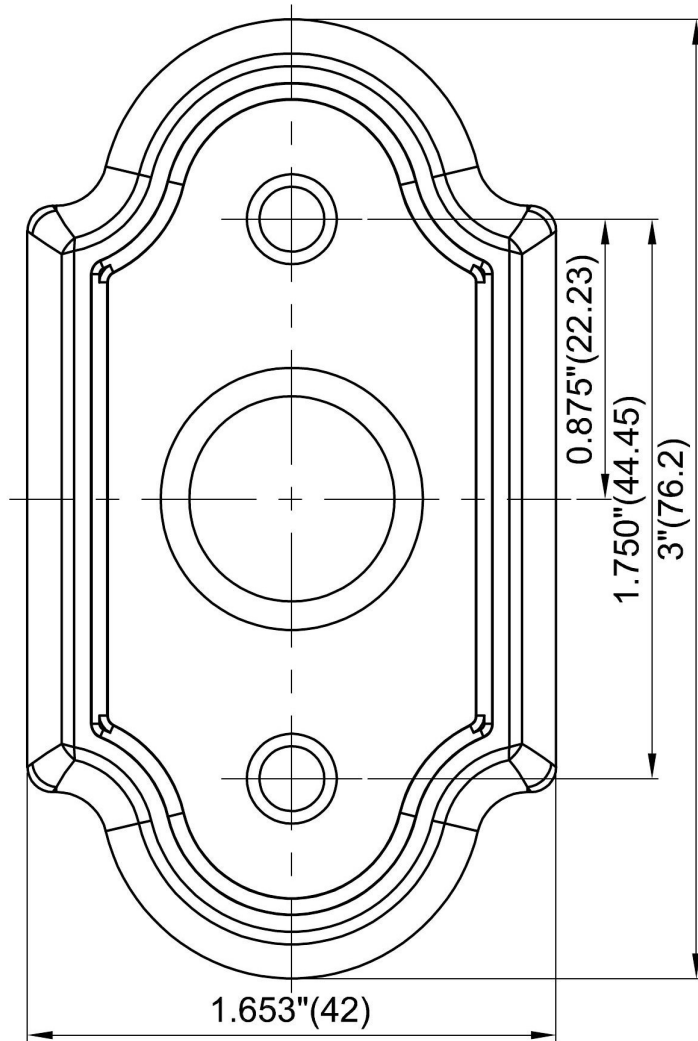

DB4	
DWG# : DB4	Rev. A
MAT'L : BRASS	DATE : 5/10/12