


INSTALLATION INSTRUCTION


INSTRUCCIONES DE INSTALACION

EP2 Sliding Door Bolt

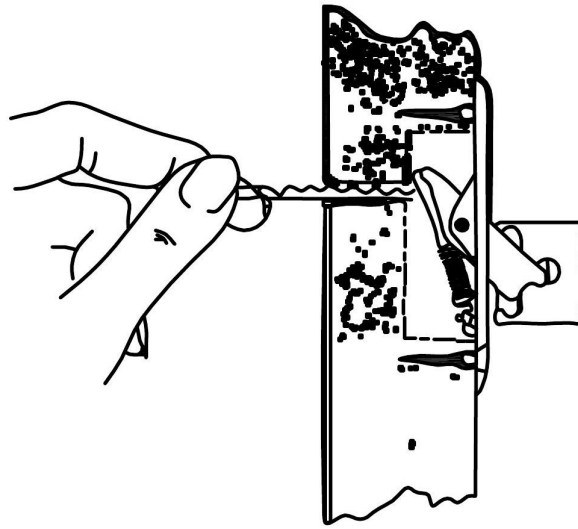

Installation Complete

To install eyelet drill 3/16" dia through door

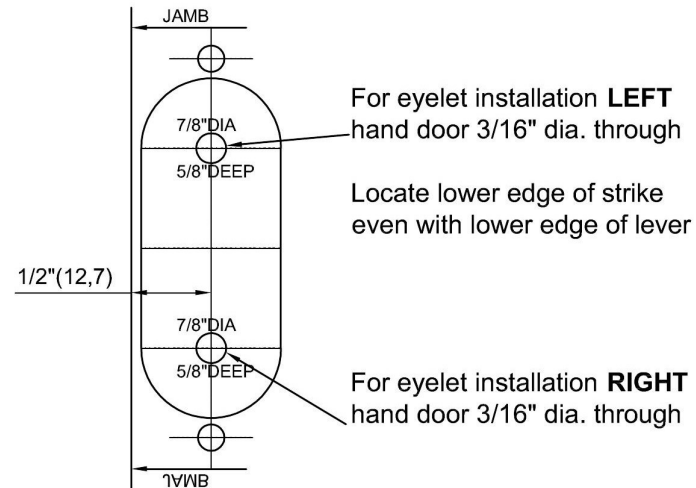

NOT TO SCALE

1. Drill two holes 5/8" deep with a 7/8" drill bit.
2. Clean with a chisel the excess material between the two holes as per template.



EP2 Sliding Door Bolt

DWG# : EP2

Rev. A

MAT'L : BRASS

DATE : 5/10/12