
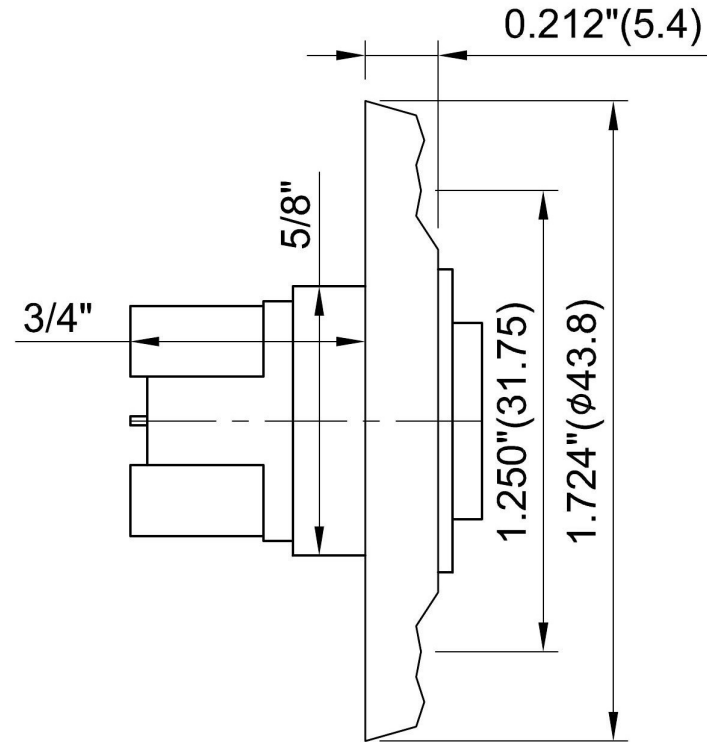



INSTALLATION INSTRUCTION
 INSTRUCCIONES DE INSTALACION

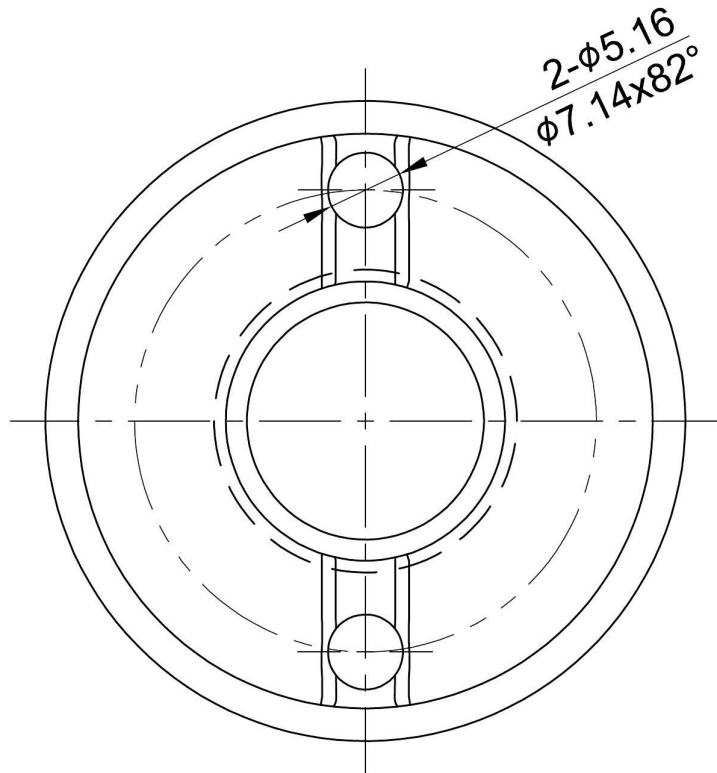

Wood Screw: 6#-15-1" X 2
 Metric Millimeters in Parenthesis

	DB6	
	DWG# : DB6	Rev. A
	MAT'L : BRASS	DATE : 5/10/12