


INSIDE
OF DOOR




2-pieces

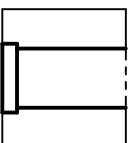

OUTSIDE
OF DOOR

-.187

℄ of
Lock

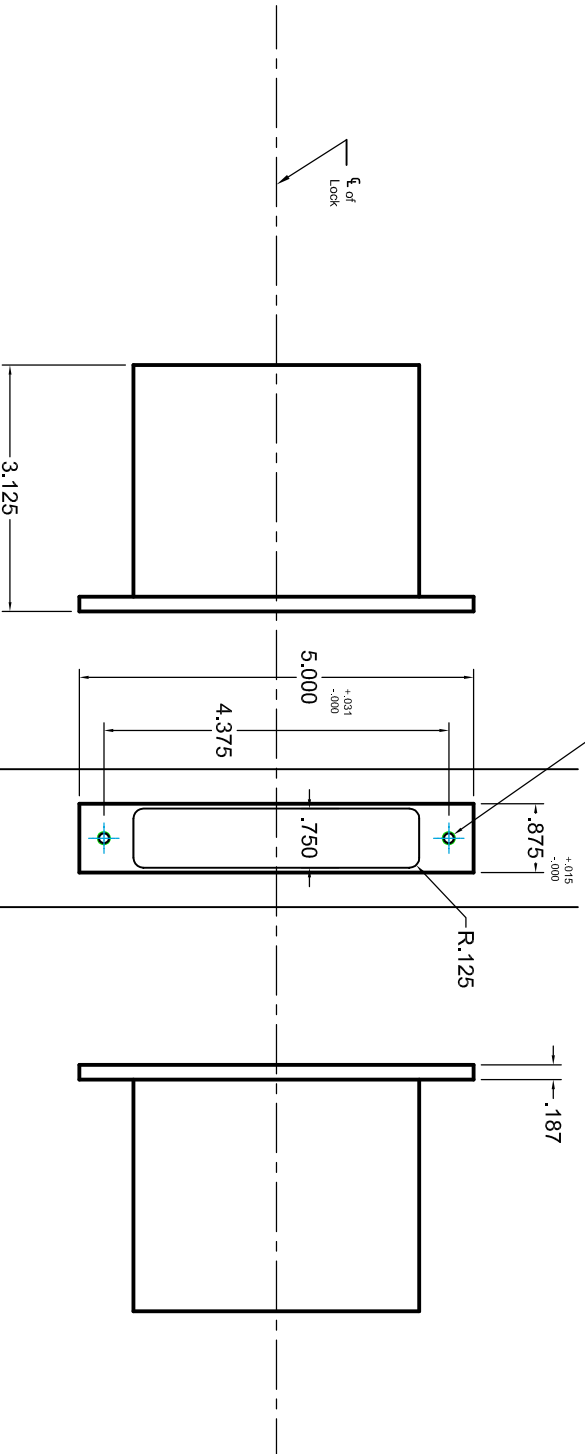

Notes:
▲ Prep for #8 wood or 8-32 machine screws.

Additional Notes:

- a) **Responsibility**: Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details

Accurate

Lock and Hardware

Standard 2000 Pocket door pull only
Template

Temp#
T-ALH.2000.LO

Rev.