

CRYSTORAMA

95 Cantiague Rock Road , Westbury, NY 11590 • toll free: 1.800.888.4470 fax: 516.931 .1254 • info@crystorama.com • www.crystorama.com

MODEL#: SOL-9328-EB ASSEMBLY INSTRUCTIONS



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 6 – Cand.Bulb

40 Watts Recommended

60 Watts Max


USE LED BULBS FOR EXTENDED USE

California T24 JA8-2016 Qualified: Satco

(S9618); 5 watt LED Candelabra Base

recommended. Bulb not included

Drawing (1)

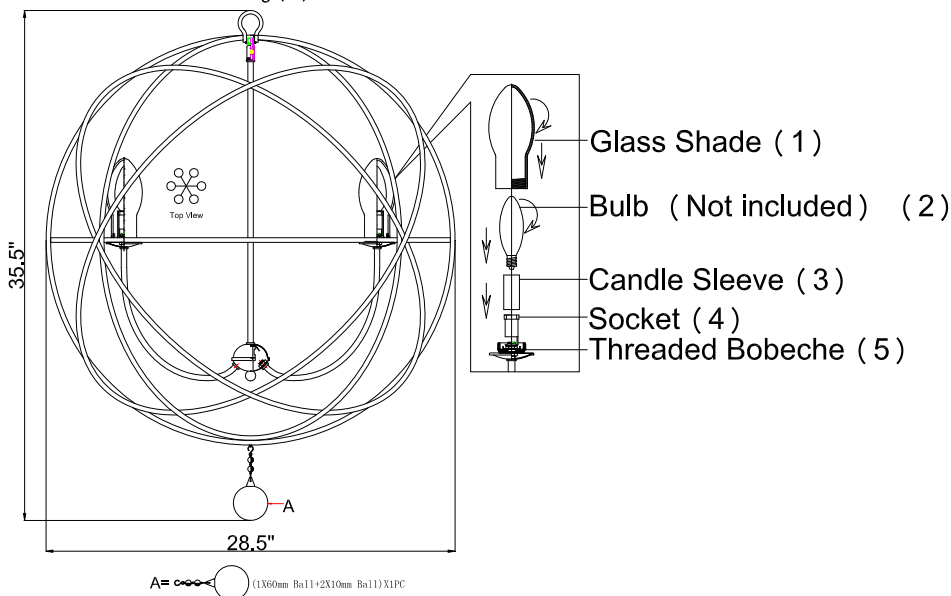

Assembly:

- To install glasses, place the candle sleeves (3) onto the sockets. Install the bulb(2). Then place the glass shade(1) over the bulb(2) and screw it onto the threaded bobèche(5).
- Hang the crystal drape (A) at the bottom.
- The canopy of the fixture can now be mounted to the ceiling by following instruction **Drawing 2**.

Replacement Glass installation:


- Unscrew the glass shade(1) from the threaded bobèche(5) with thread.
- Replace the new glass shade by screw threaded bobèche(5) with thread.

Bulb replacement:

- Unscrew the glass shade(1) from the threaded bobèche(5) with thread.
- To replace the bulb.
- Then put the glass shade(1) onto the bulb, screw by the glass ring with thread.

After securing fixture to the ceiling it is recommended that the gap between the ceiling and the canopy be sealed on the top and both sides, with a good quality waterproof caulk or silicone sealant (NOT INCLUDED)

Drawing (2)

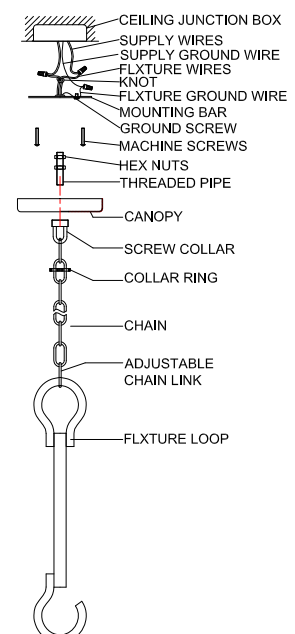

2017-09-20