


9001 Mortise Screen Door Lock

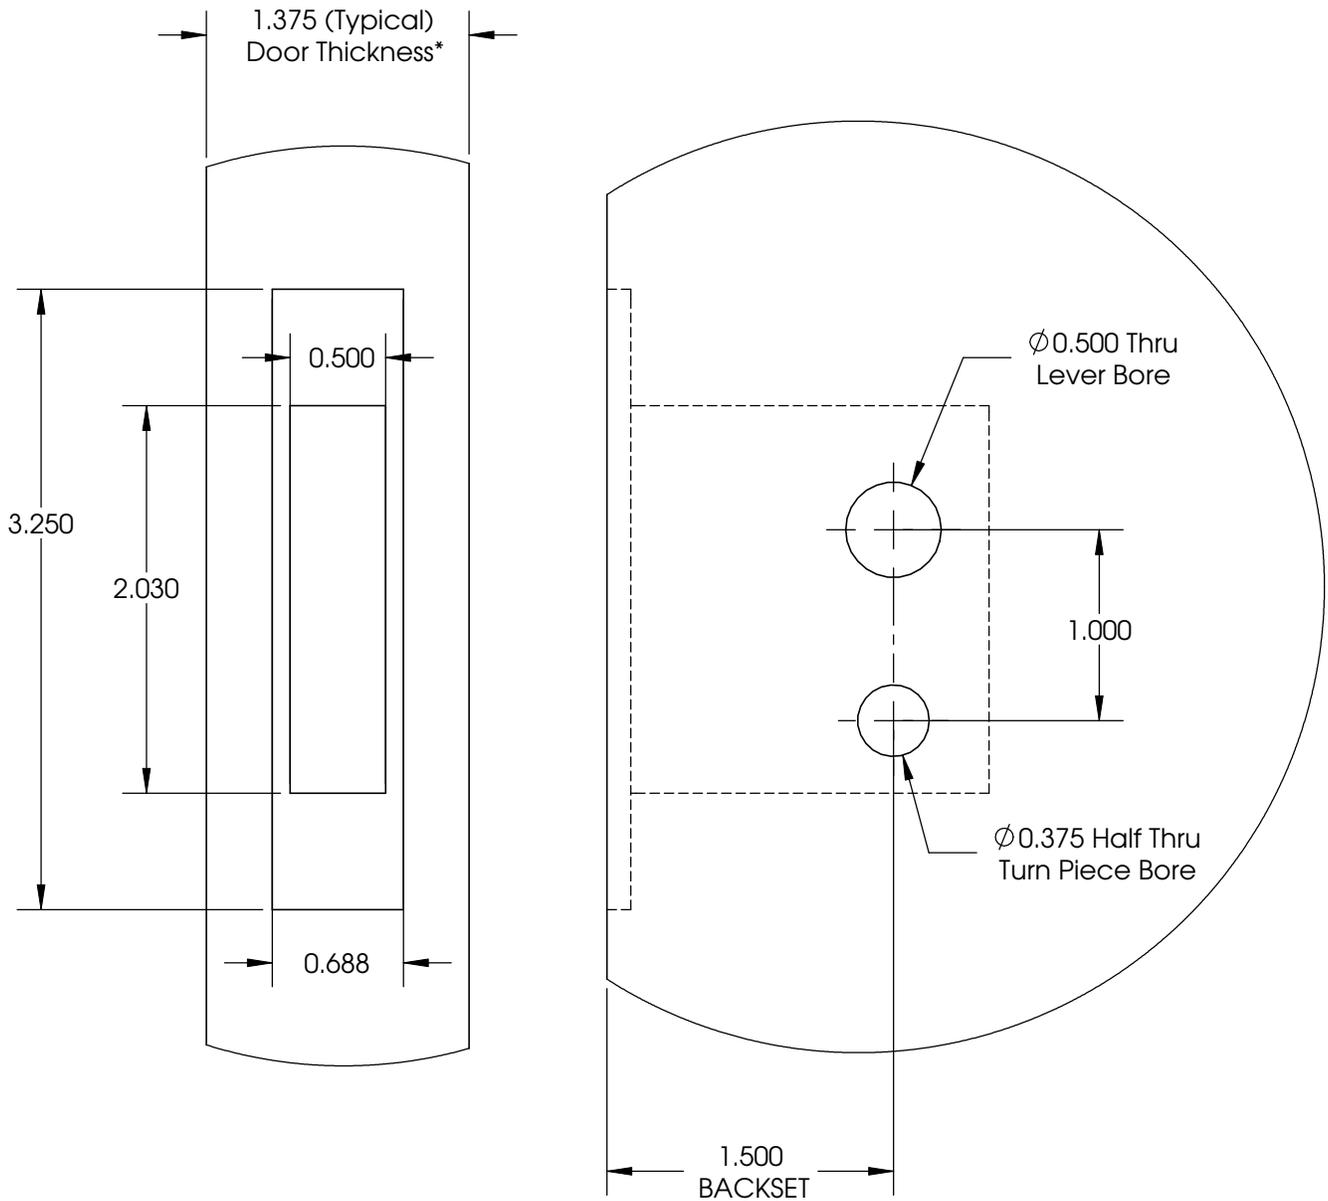


*While typical door thickness is shown, doors as thin as 1" and as thick as 1 3/4" can utilize the screen door hardware. For doors more than 1 3/8" thick, a thick door kit is required.

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF VON MORRIS CORPORATION. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF VON MORRIS CORPORATION IS PROHIBITED.


TITLE:		Screen Door Mortise Lock Door Prep	
DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL ± ANGULAR: MACH ± BEND ± TWO PLACE DECIMAL ± THREE PLACE DECIMAL ±	NAME	DATE	 PHONE: 1-800-646-6888 FAX: 1-800-646-8988 email: info@vonmorris.com http://www.vonmorris.com
	DRAWN		
MATERIAL	CHECKED		DO NOT SCALE DRAWING
FINISH	ENG APPR.		
	MFG APPR.		SIZE DWG. NO. REV.
	Q.A.		A
		SCALE: 1:24	SHEET 1 OF 5

9001 Mortise Screen Door Lock Installation

- 1) Prep door as shown on door prep template page.
- 2) Install lock into mortise cut-out as shown below.

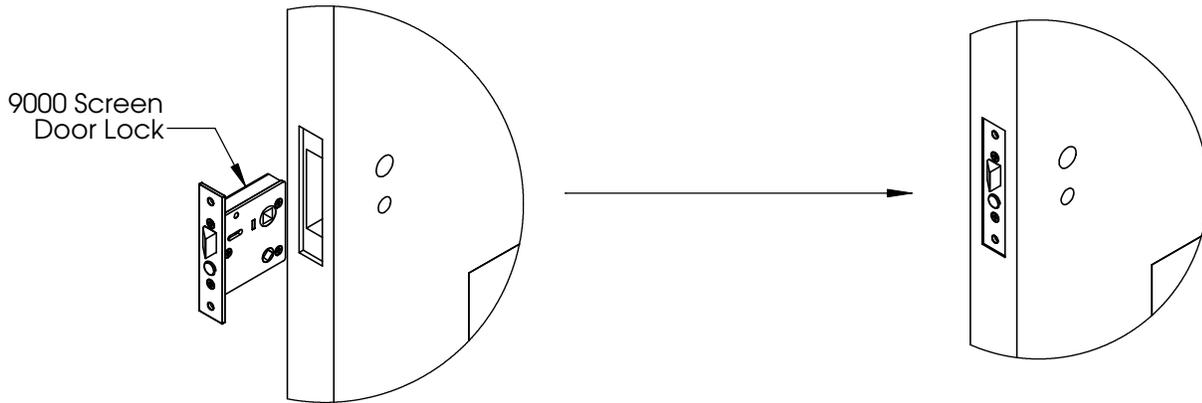


- 3) Apply interior escutcheon plate to interior face of door. Ensure that the spindle from the turn piece engages the small diamond hub in the lock housing. Secure using the two #6 slotted head screws provided as shown below.

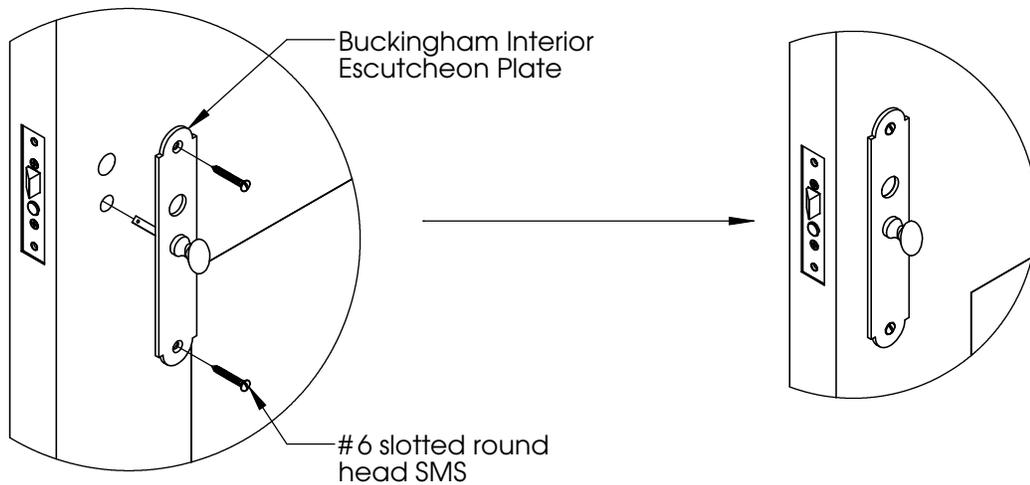


TITLE:			
DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL ± ANGULAR: MACH ± BEND ± TWO PLACE DECIMAL ± THREE PLACE DECIMAL ±		NAME	DATE
MATERIAL	DRAWN		
FINISH	CHECKED		
	ENG APPR.		
	MFG APPR.		
	Q.A.		
PHONE: 1-800-646-6888 FAX: 1-800-646-8988 email: info@vonmorris.com http://www.vonmorris.com		DO NOT SCALE DRAWING	
PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF VON MORRIS CORPORATION. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF VON MORRIS CORPORATION IS PROHIBITED.		SIZE A DWG. NO.	REV.
SCALE: 1:24		SHEET 2 OF 5	

4) Attach exterior escutcheon plate to exterior face of door. The use of the 9999 alignment tool is strongly recommended to ensure that the plate is properly installed. Secure the plate to the exterior face using the two #6 slotted screws provided as shown below.

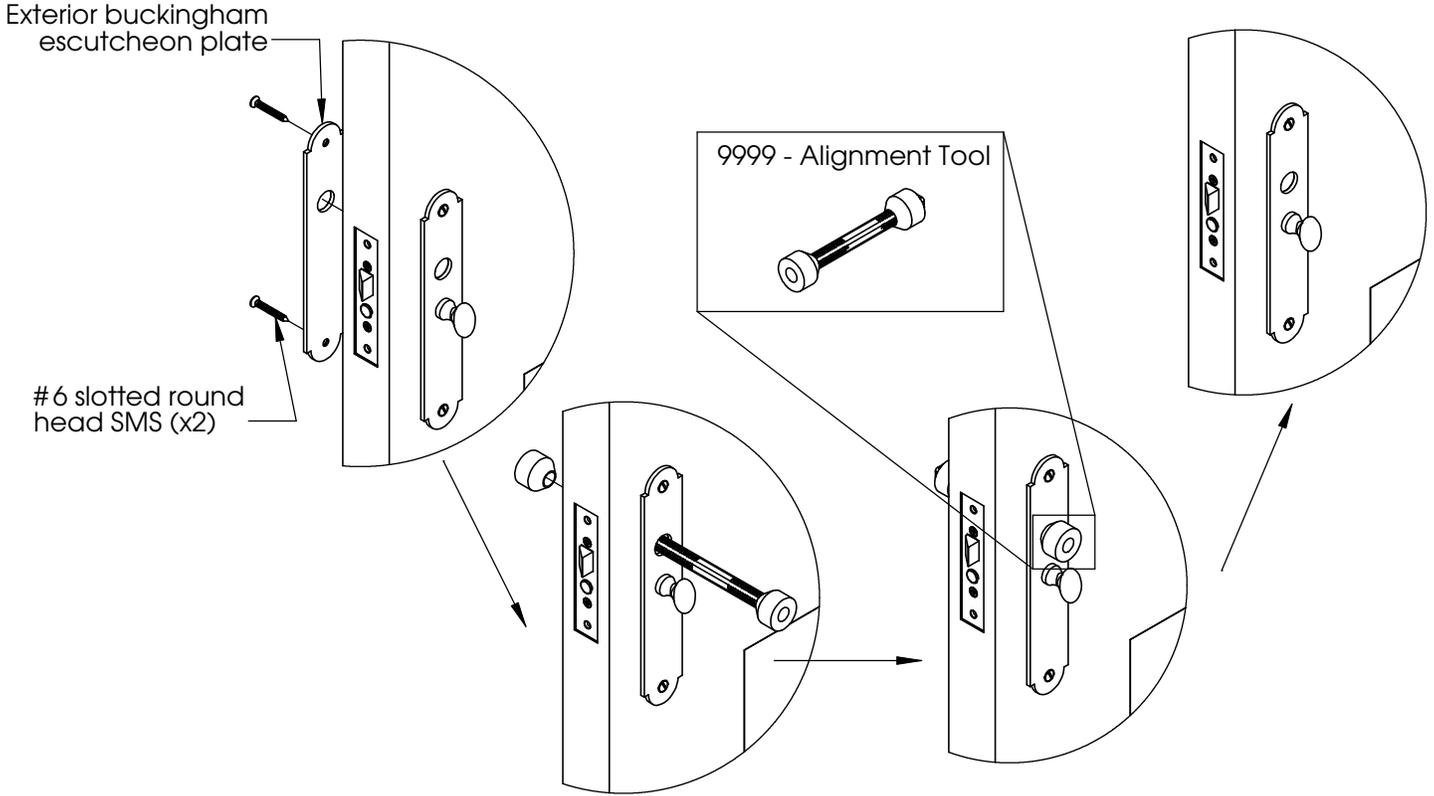


5) Install spindle into exterior knob until it bottoms out as shown below. Secure using the set screw in the knob.

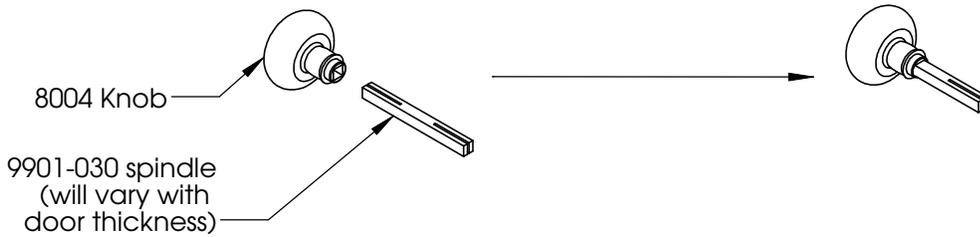


TITLE:			
DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL ± ANGULAR: MACH ± BEND ± TWO PLACE DECIMAL ± THREE PLACE DECIMAL ±		NAME	DATE
MATERIAL		DRAWN	
FINISH		CHECKED	
		ENG APPR.	
		MFG APPR.	
		Q.A.	
			
		PHONE: 1-800-646-6888 FAX: 1-800-646-8988 email: info@vonmorris.com http: // www.vonmorris.com	
DO NOT SCALE DRAWING			
SIZE	DWG. NO.	REV.	
A			
SCALE: 1:24			SHEET 3 OF 5

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF **VON MORRIS CORPORATION**. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF **VON MORRIS CORPORATION** IS PROHIBITED.


6) Insert knob/spindle assembly from the exterior side. Ensure that the knob is directly against the exterior escutcheon plate.

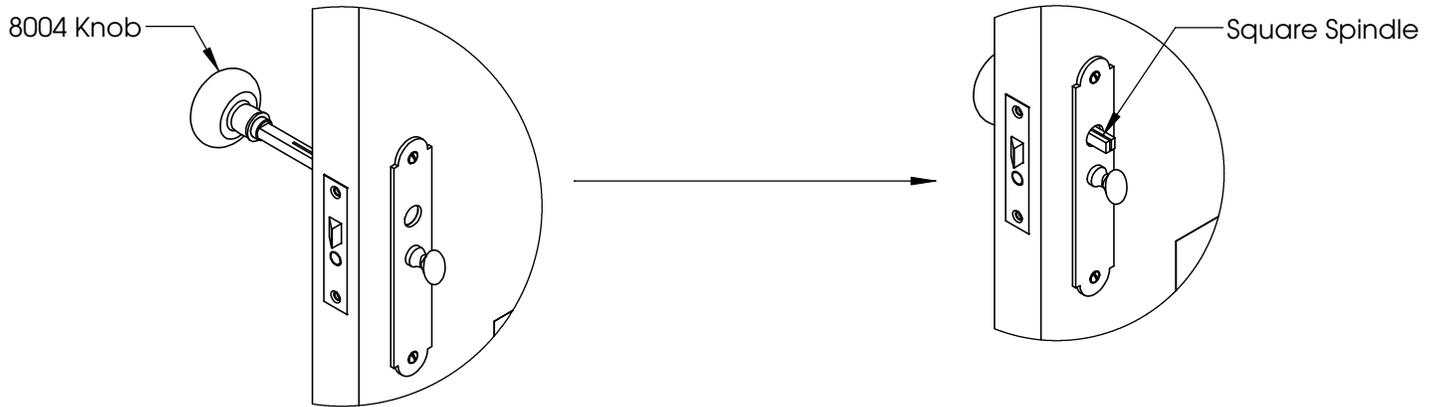

7) Attach lever to interior side of door. Ensure that the spindle rests directly against the interior escutcheon plate (note: the spindle may need to be cut to allow this). Secure the lever to the spindle using the set screw.

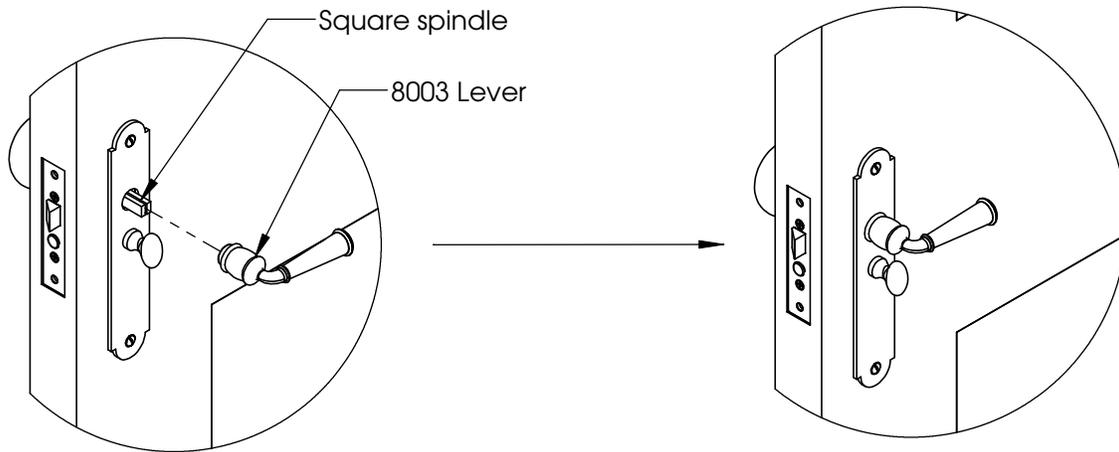

8) Attach finished face plate to lock and door using the two # 6 screws provided as shown below.

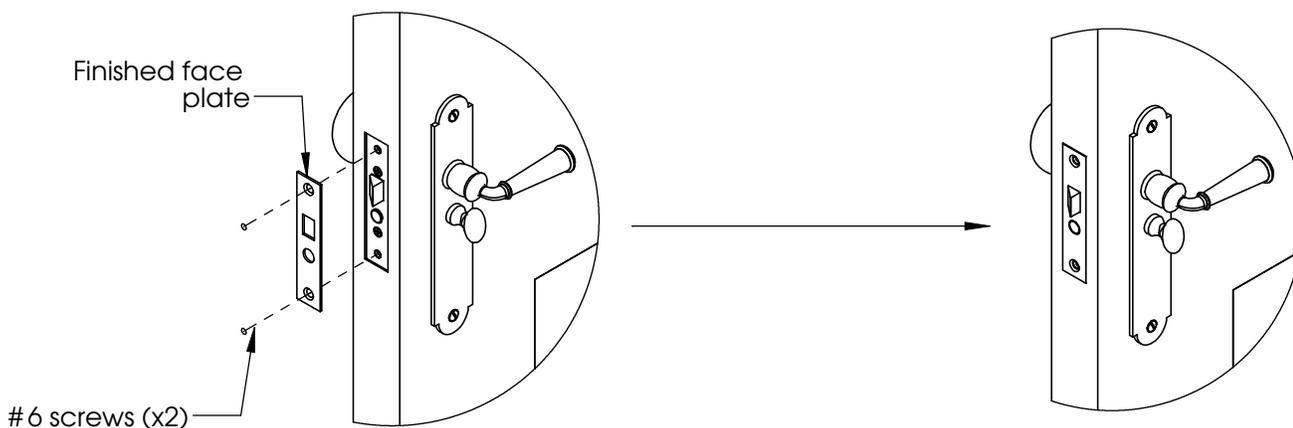

TITLE:

DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL ± ANGULAR: MACH ± BEND ± TWO PLACE DECIMAL ± THREE PLACE DECIMAL ±		NAME	DATE
MATERIAL	DRAWN		
FINISH	CHECKED		
	ENG APPR.		
	MFG APPR.		
	Q.A.		





PHONE: 1-800-646-6888
FAX: 1-800-646-8988
email: info@vonmorris.com
http: // www.vonmorris.com

DO NOT SCALE DRAWING

SIZE A	DWG. NO.	REV.
SCALE: 1:24	SHEET 4 OF 5	

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF **VON MORRIS CORPORATION**. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF **VON MORRIS CORPORATION** IS PROHIBITED.

9001 Screen Door Lock Strike Details and Install

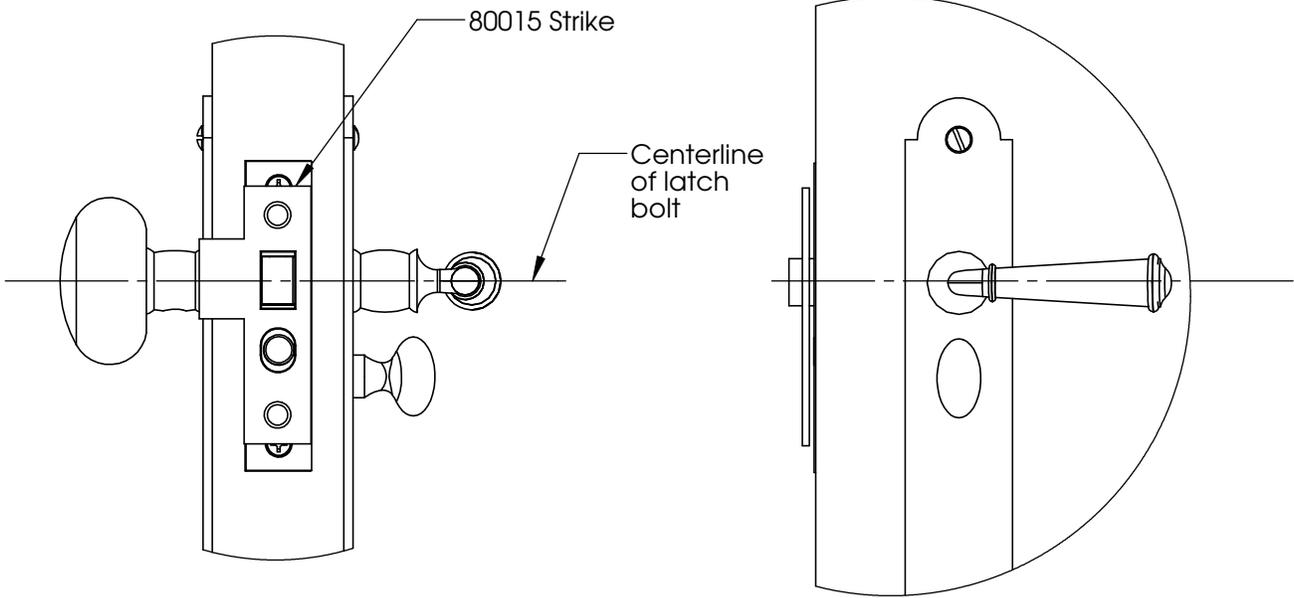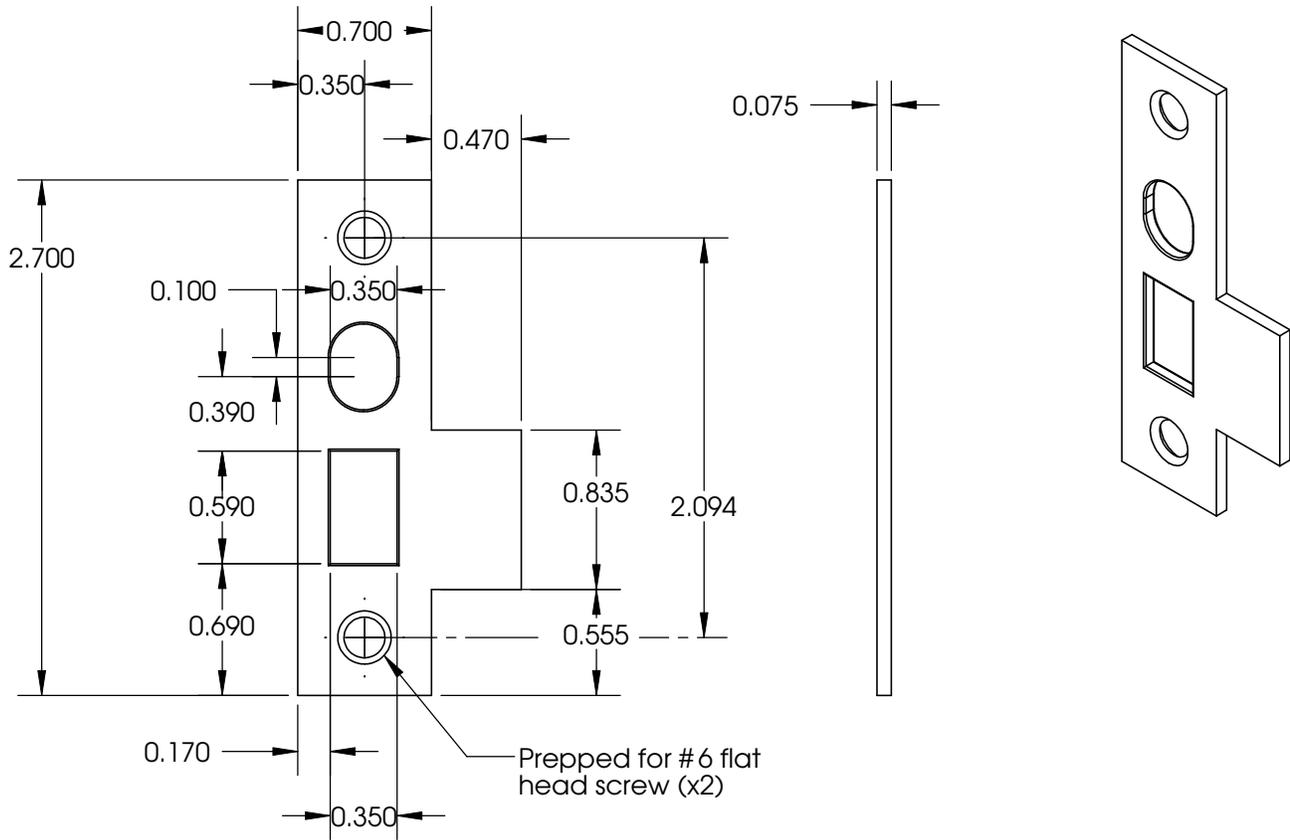

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF VON MORRIS CORPORATION. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF VON MORRIS CORPORATION IS PROHIBITED.

TITLE:			
DIMENSIONS ARE IN INCHES			
TOLERANCES:			
FRACTIONAL ±			
ANGULAR: MACH ± BEND ±			
TWO PLACE DECIMAL ±			
THREE PLACE DECIMAL ±			
MATERIAL	DRAWN	NAME	DATE
FINISH	CHECKED		
	ENG APPR.		
	MFG APPR.		
	Q.A.		
 PHONE: 1-800-646-6888 FAX: 1-800-646-8988 email: info@vonmorris.com http: // www.vonmorris.com		DO NOT SCALE DRAWING	
SIZE	DWG. NO.	REV.	
A			
SCALE: 1:1		SHEET 5 OF 5	