

# G & M Products L.L.C.


Auburn, AL 36830

[www.screenendoorknobs.com](http://www.screenendoorknobs.com)


(334) 826-0808

*This product is available in the following finishes:*

- Brushed Nickel
- Venetian Bronze
- Black Aluminum
- Silver Aluminum
- Bright Brass
- Antique Brass
- Bright Chrome
- Brushed Chrome

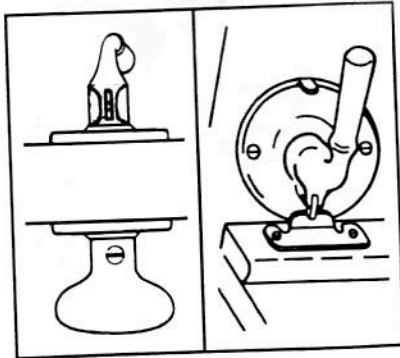

4. Locate outside rose by screwing knob snugly against it. Fasten with wood screws. Back off knob until lever turns smoothly and tighten knob set screw against flat of spindle.
5. Fasten strike to stop with wood screws. DO NOT MORTISE.
6. If additional engagement between latch and strike is desired, place plastic shim between strike and door stop.

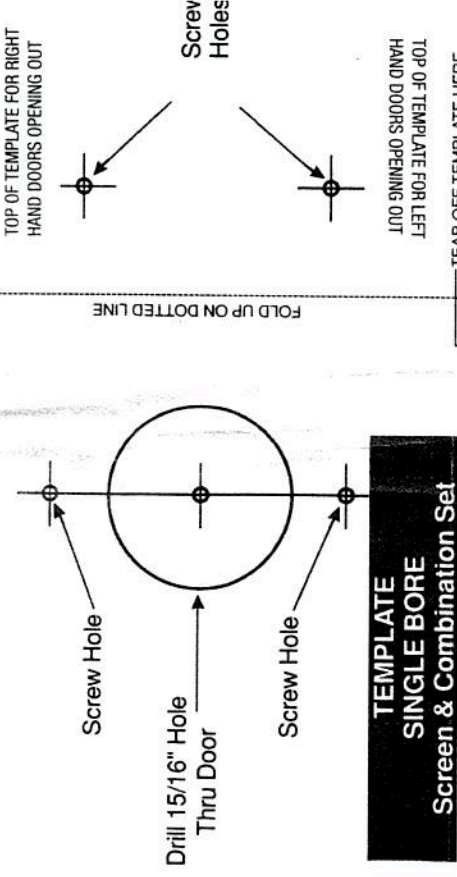

**TEMPLATE  
SINGLE BORE  
Screen & Combination Set**

## INSTALLATION INSTRUCTIONS

1. Fold template - WITH DOOR CLOSED - PLACE AGAINST INSIDE CORNER OF DOOR AND DOOR STOP. HANDLE MUST CLEAR TRIM ON OTHER DOOR.
2. Spot for 15/16" hole and screw holes. Drill 15/16" hole.
3. Insert lever, with threaded spindle, from inside and fasten screws.

