


BENTLEY

FR44506BBZ

Bulbs: 60W CAND.

Replacement Parts: Crystals: R44505CRY Shade: R44500SH

Canopy Crystal: R44500CRY

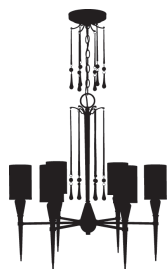

[DRAWING 1]


ASSEMBLY INSTRUCTIONS

Assembly of this fixture will be accomplished by assembling the main body of the fixture, installing the mounting hardware to the junction box, making all necessary electrical connections and then hanging the fixture.

SAFETY WARNING: Read wiring and grounding instructions [FRIS 18] and any additional directions. Turn power supply off during installation. If new wiring is required, consult a qualified electrician or local authorities for code requirements.

STEP 1

- 1 Slip crystal (a) along wire and slip over polished coupler (b) - See Drawing 1.
- 2 Slip center stem (c) along wire and thread into coupler (b).
- 3 Slip bottom cap (d) along wire and over center stem (c).
- 4 Slip center tube (e) along wire and over center stem (c).
- 5 Slip spider assembly (f) along wire and over center stem (c).
- 6 Slip spacer (g) along wire and over center stem (c).
- 7 Slip loop (h) along wire and thread onto end of center stem (c) and tighten to secure parts.
- 8 Slip bottom crystal (i) over coupler (j) and thread knob (k) into coupler to secure crystal.
- 9 Thread tail (l) into bottom of arms.
- 10 Slip candle sleeve (m) over socket.

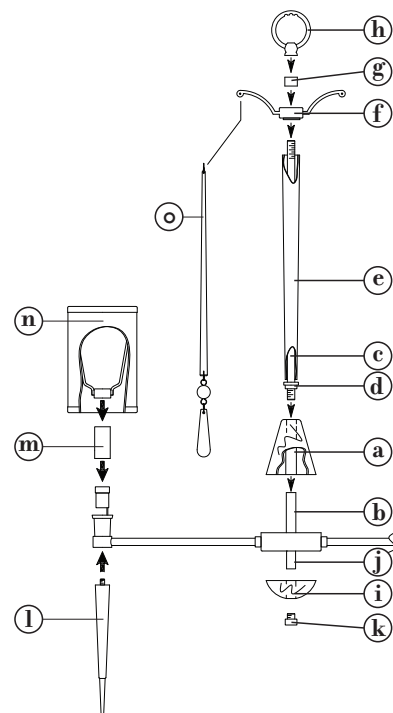

STEP 2 Refer to Hanging Instruction Sheet [FRIS19-100] to hang fixture and complete assembly.

STEP 3

- 1 After installation slip shade (n) onto candle sleeve (m) - See Drawing 1.
- 2 Fixture can now be lamped accordingly.
- 3 Attach long crystal drop (o) to end of arms on spider (f).



FREDRICK RAMOND
ESTABLISHED 1965

800.421.3517 WWW.FREDRICKRAMOND.COM

6.7.10