


Rosette Door Hardware

Installation Instructions — For doors without a 2-1/8" cross-bore


Updated November 2015

Dummy


- A** Determine backset (distance between edge of door and center of rosette.) Check other doors in the house to determine backset.

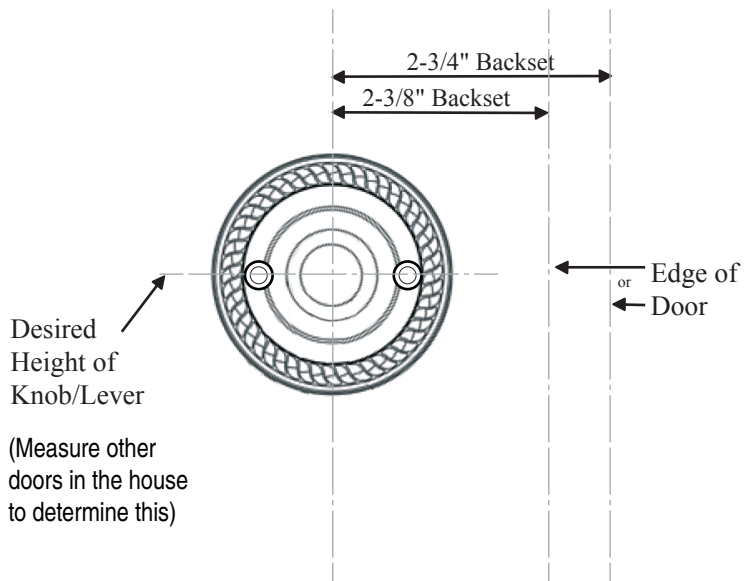


- B** Mark the holes

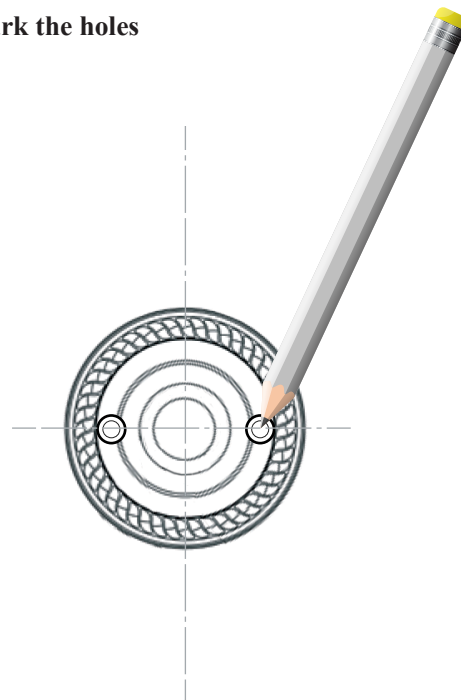

- C** Using a 7/64" drill bit, drill the screw holes at least 3/4" deep.

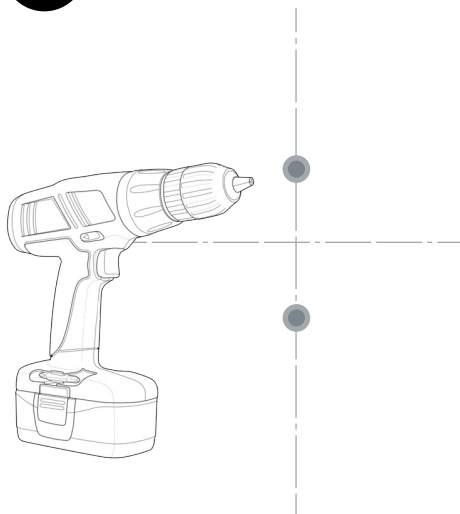

- D** Insert the rosette screws and tighten until snug.

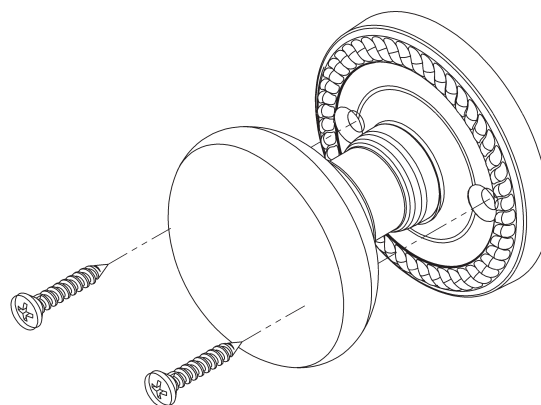

Grandeur
By NOSTALGIC
WAREHOUSE








Rosette Door Hardware Installation Instructions

Updated February 2015

Passage/Privacy

Note: Passages and privacies fit doors 1-3/8" to 1-3/4" thick

Skip to Step G if your door has pre-drilled bore holes.

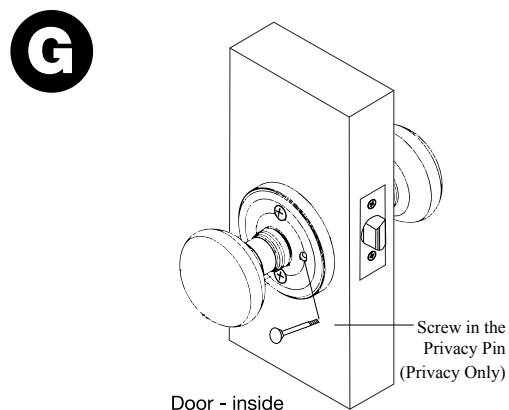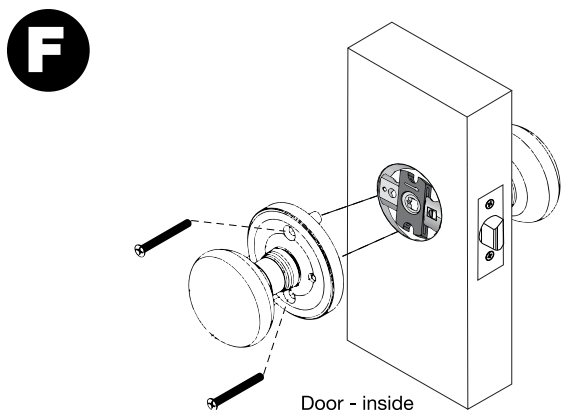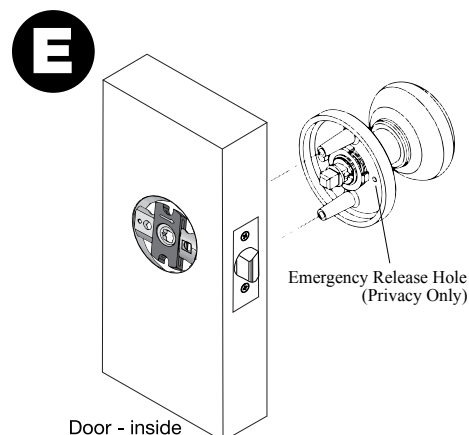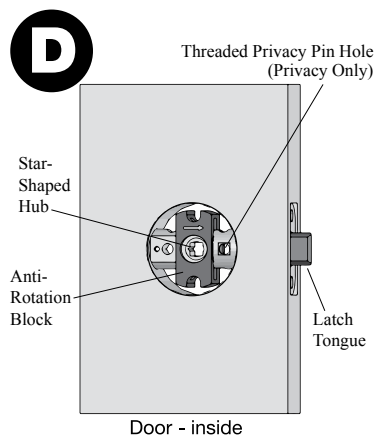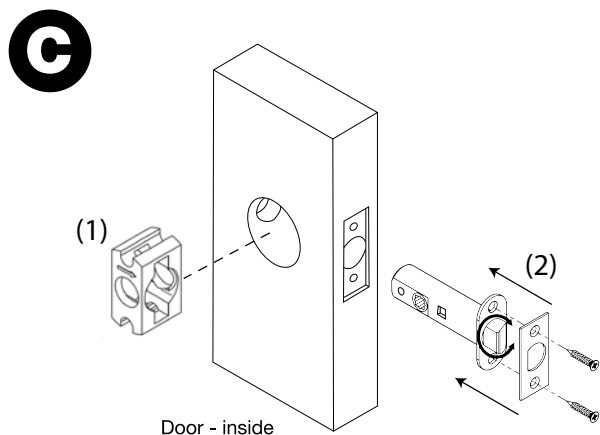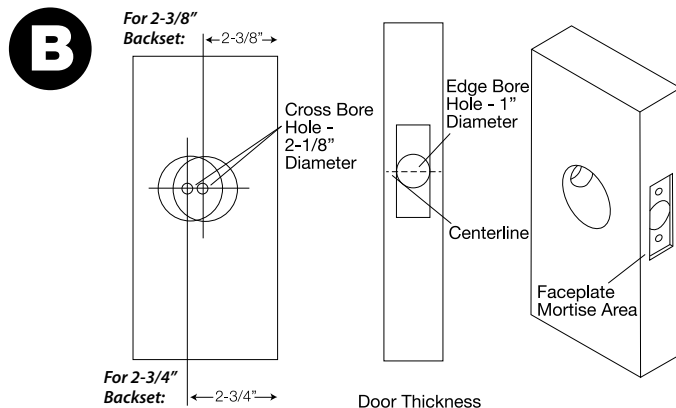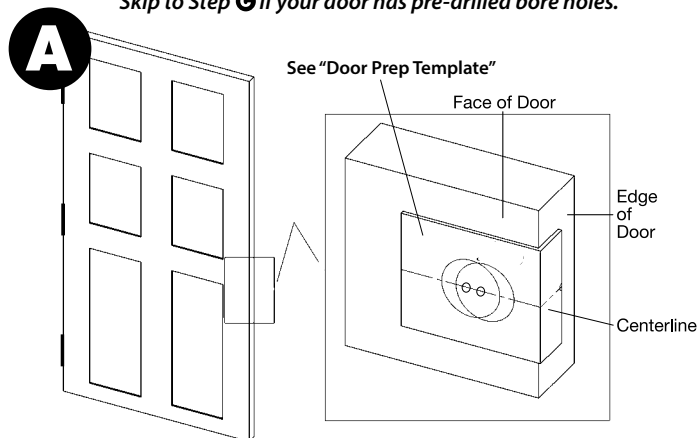

Grandeur
By NOSTALGIC
WAREHOUSE

For assistance call 1-800-522-7336 Mon-Fri, 8 am to 5 pm Mountain Time

PK143 Rev.2 02172015

