

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

Assembly Instruction Sheet #IS-MRE8408WT For Style MRE8408WT

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

BulbRecommended: (1) Medium Base 100 W Maximum(supplied) **Estimated Assembly Time:** 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.




Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

	Package Conter	nts		A
Part	Description	Quant	tity	
А	Crossbar	1 pc	;.	
В	Mounting Screw	2 pc:	s.	В
С	Lock Washer	2 pc:	s.	C C
D	Hex Nut	2 pc:	s.	D
Е	Lock Ball	2 pc:	s.	
F	Fixture Body	1 pc	;.	E
G	Bulb	1 pc	;.	
Н	Shade	1 pc	;.	
I	Cage	1 pc	;.	
J	Washer	2 pc:	s.	F
К	Lock Ball	2 pc:	s.	

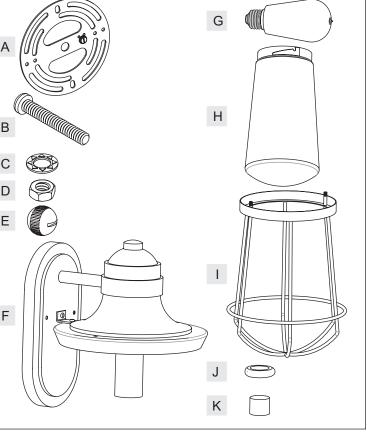



Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.guoizel.com

© 2013 Quoizel Inc.

1of6

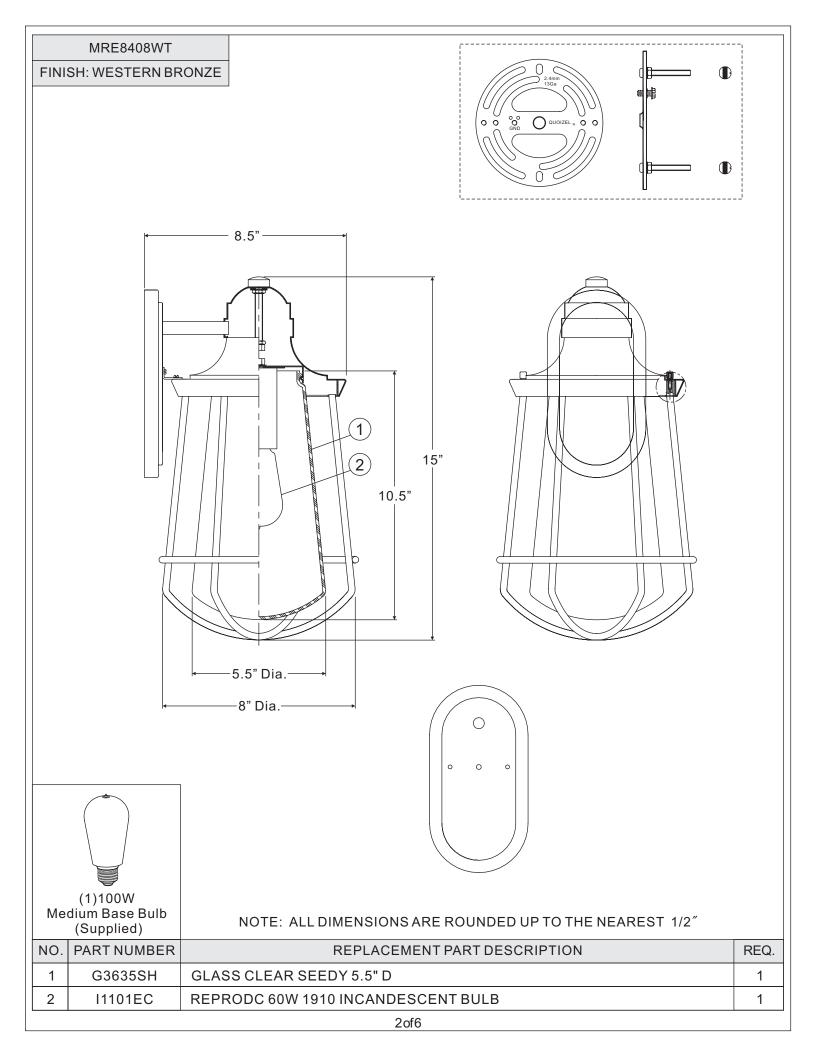

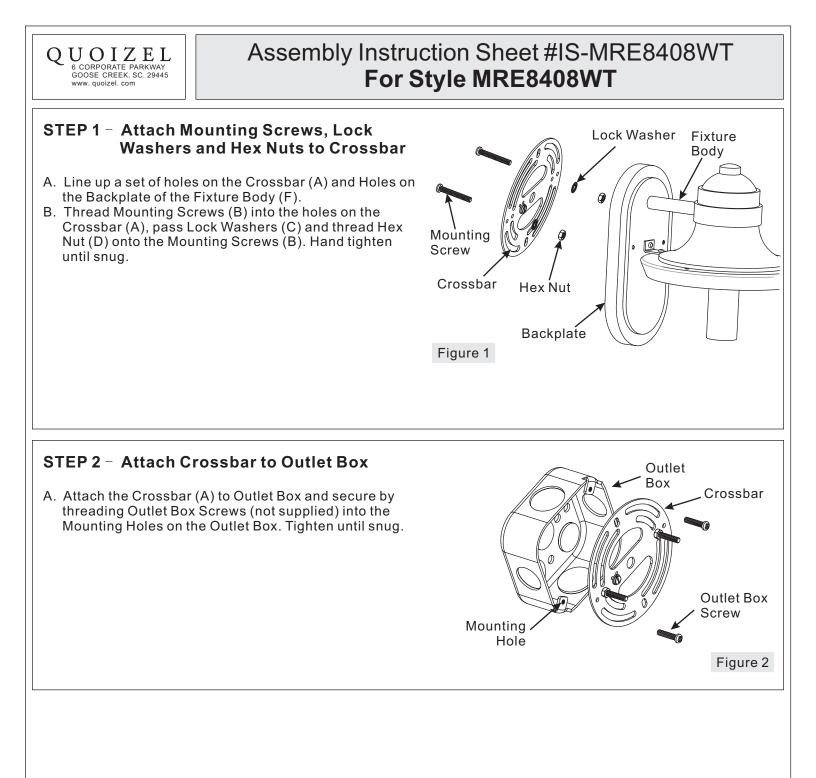

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

© 2013 Quoizel Inc.



Assembly Instruction Sheet #IS-MRE8408WT For Style MRE8408WT

STEP 3 - Make Wire Connections

- A. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- B. Connect White Supply Wire from the Outlet Box to White Wire from fixture.
- C. Connect Black (or Red) Supply Wire from the Outlet Box to Black Wire from fixture.
- D. Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- E. Twist connectors until wires are tightly joined together.
- F. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.



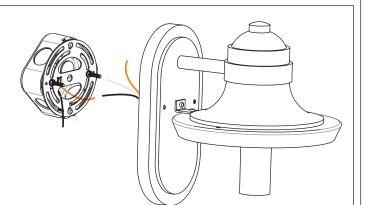


Figure 3

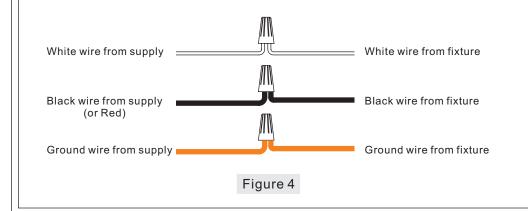

STEP 4 – Attach Fixture Body to Mounting Screw

A. Place the Backplate of the Fixture Body (F) over the Mounting Screws (B) and secure with Lock Ball (E). Hand tighten until snug.

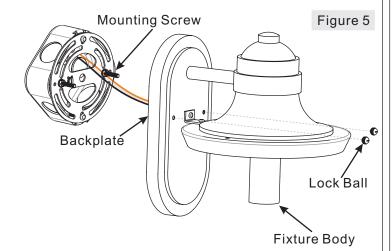

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

© 2013 Quoizel Inc.


4of6



Assembly Instruction Sheet #IS-MRE8408WT For Style MRE8408WT


STEP 5 - Install Bulb

- A. This fixture uses standard bulb (supplied) with a standard screw base. Maximum 100 watts.
- B. Insert bulb and screw properly into place.

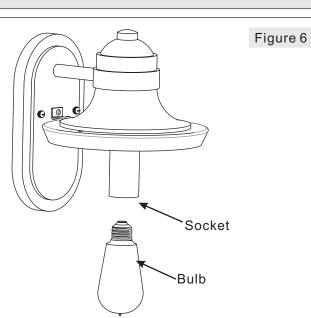

STEP 6 - Attach Shade to Fixture Body

A. Thread Shade (H) to Fixture Body (F), hand tighten until snug.

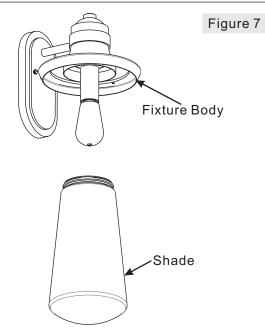

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

© 2013 Quoizel Inc.


5of6



Assembly Instruction Sheet #IS-MRE8408WT For Style MRE8408WT

STEP 7 - Attach Cage to Fixture Body


A. Pass the Bolt on the top of Cage (I) though the Hole on the Fixture Body (F),place the Washer (J) over the Bolt, secure by thread the Lock Ball (K) onto the Bolt on the top of Cage (I). Hand tighten until snug.

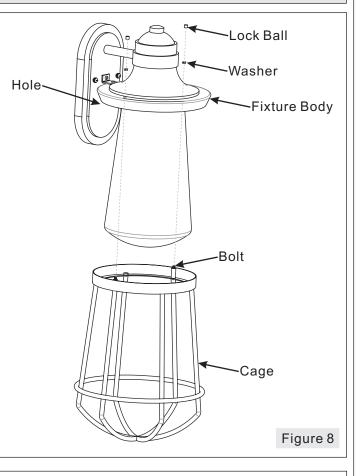

STEP 8 - Apply Silicone Sealer to Backplate

A. Make sure exterior wall surface and fixture backplate are free of dirt before applying caulk. Using exterior grade caulk, start on one side of fixture backplate and follow contour, where the fixture backplate meets the exterior wall surface upward. Proceed to caulk over top of backplate and down other side. Do not caulk bottom of fixture backplate to ensure proper moisture drainage.

Your fixture is now assembled and ready to use. Enjoy!

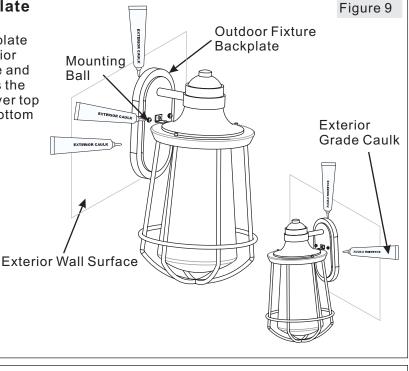

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

© 2013 Quoizel Inc.