FRANCESCA

FR40316SLF

Bulbs: 60W CAND. *Replacement Parts:* CRYSTALS: R40310CRY / R40310CRY-B / R40315CRY

[DRAWING 1]

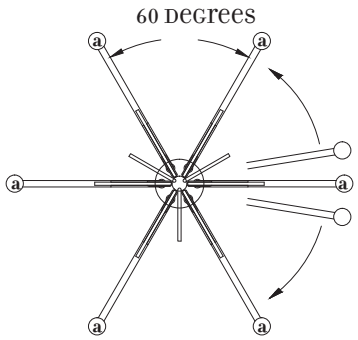

[DRAWING 2]

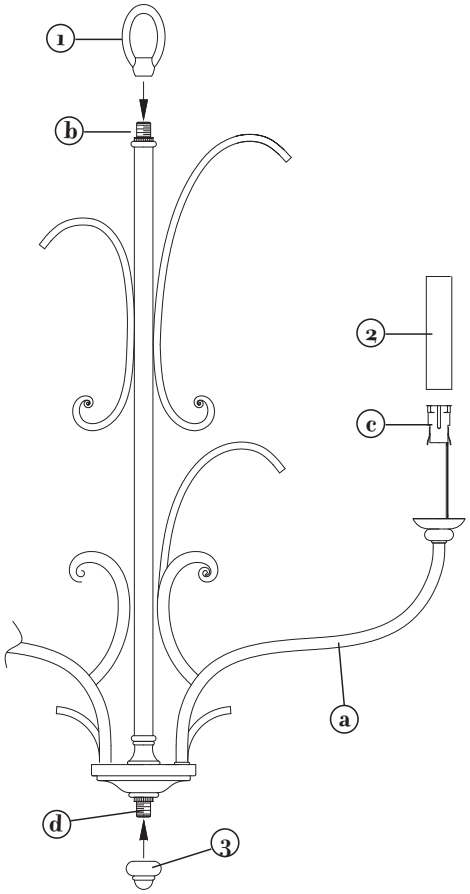

ASSEMBLY INSTRUCTIONS

Assembly of this fixture will be accomplished by first installing the mounting hardware to the junction box, making all necessary electrical connections, mounting the fixture to the ceiling and then attaching the crystals.

SAFETY WARNING: Read wiring and grounding instructions **[FRIS 18]** and any additional directions. Turn power supply off during installation. If new wiring is required, consult a qualified electrician or local authorities for code requirements.

STEP 1

1. To assembly fixture first take fixture arms (a) and rotate them until they are approximately 60 degrees apart - see Drawing 1.
2. Slip loop (1) along supply wire and thread onto threaded tube (b) and tighten.
3. Slip candle sleeve (2) over socket (c).
4. Thread bottom decorative knob (3) onto threaded tube (d) at bottom of fixture.

STEP 2

1. It is recommend that the fixture be installed prior to attaching the crystals. Please follow mounting instruction sheet [FRIS 19] provided to hang the fixture.
2. After fixture is mounted please refer to crystal hanging instruction sheet to complete fixture assembly.

FREDRICK RAMOND
ESTABLISHED 1965

A Division of Hinkley Lighting, Inc.
33000 PIN OAK PARKWAY | AVON LAKE, OHIO 44012
toll free 800.446.5539 | *phone* 440.653.5500

01.01.12

FRANCESCA

FR40316SLF

Bulbs: 60W CAND. *Replacement Parts:* GLASS: R40310CRY / R40310CRY-B / R40315CRY

CRYSTAL INSTALLATION INSTRUCTIONS

There are 2 types of crystals that need to be installed on this fixture. It is recommended that the flower crystals be attached first, followed by the teardrop crystals, and then the compelted bobesches.

[DRAWING 1]

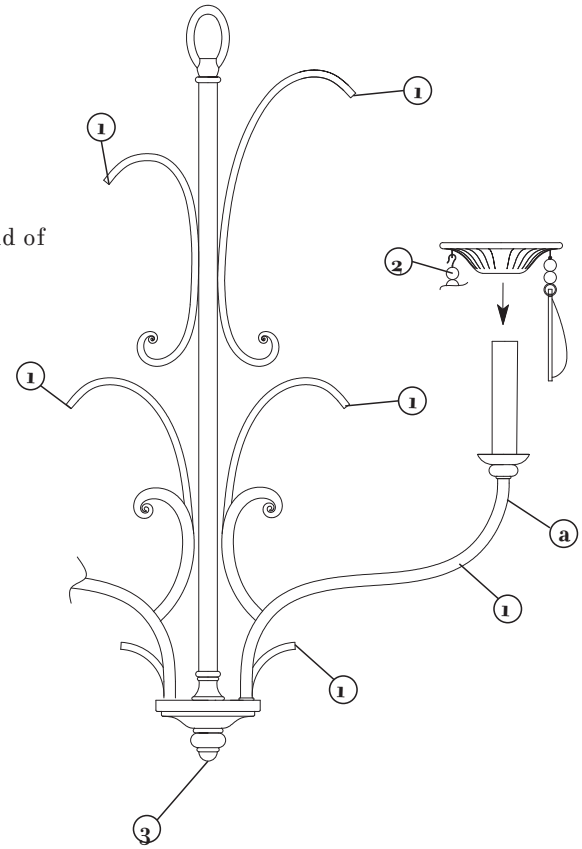

STEP 1 FLOWER CRYSTALS

1 All flower crystals (f) attach in the same manner. There locations are illustrated in Drawing 1.
2 First remove ball knob with stud (b) and rubber washers (r) from location (1) on Drawing 1.
3 To attach flower crystal, first slip rubber washer (r) onto stud (s), next slip crystal flower (f) onto stud, followed by another rubber washer (r) - see Drawing 2 below.
4 Thread stud (s) into end of arms at locations (1) on Drawing 1.
5 After flower crystal is secure, attach one tear drop crystal (t) to end of ball knob stud (b).

[DRAWING 2]

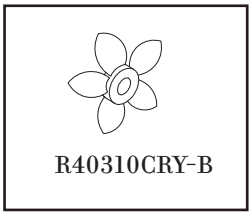

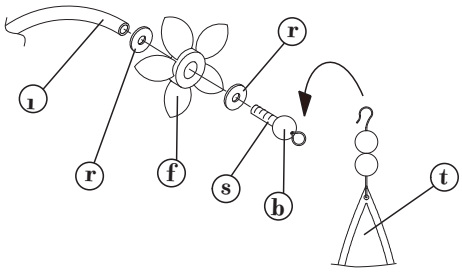

STEP 2 BOBESCHE ASSEMBLY

1 Take bobesche crystals (bc) and slip them over candle sleeve (cs). - see Drawing 2 and 3.
2 Take a teardrop crystal (t) and attach to bobesche crystal (bc) at location (2). Note: each bobeche requires 4 teardrop crystals.
3 One teardrop crystal is attached at the base of the fixture at location (3).

[DRAWING 3]

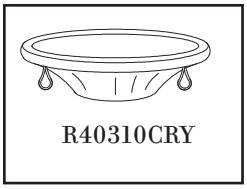

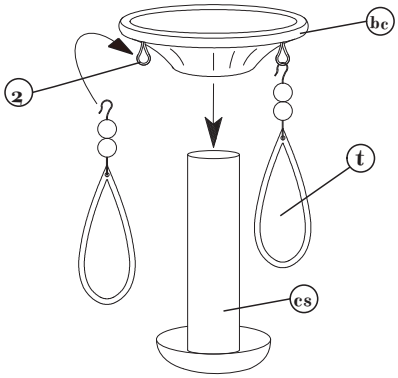

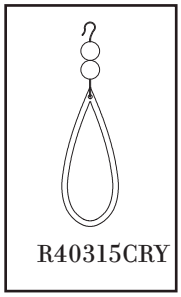

FREDRICK RAMOND
ESTABLISHED 1965

A Division of Hinkley Lighting, Inc.
33000 PIN OAK PARKWAY | AVON LAKE, OHIO 44012
toll free 800.446.5539 | *phone* 440.653.5500

01.01.12